

# ONKYO®

## BLU-RAY DISC PLAYER

# *BD-SP308*

## Instruction Manual

Thank you for purchasing an Onkyo BLU-RAY DISC PLAYER. Please read this manual thoroughly before making connections and plugging in the unit. Following the instructions in this manual will enable you to obtain optimum performance and listening enjoyment from your new BLU-RAY DISC PLAYER.

Please retain this manual for future reference.

## Contents

Safety Information .....2

Preparation .....5

Installation .....11

Operation .....23

Maintenance.....32

Troubleshooting .....33

Appendix .....35



## WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

## CAUTION:

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



**WARNING**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN

**AVIS**  
RISQUE DE CHOC ELECTRIQUE  
NE PAS OUVRIR




The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.  
  
PORTABLE CART WARNING  
S3125A
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Damage Requiring Service  
Unplug the apparatus from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - A. When the power-supply cord or plug is damaged,
  - B. If liquid has been spilled, or objects have fallen into the apparatus,
  - C. If the apparatus has been exposed to rain or water,
  - D. If the apparatus does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the apparatus to its normal operation,
  - E. If the apparatus has been dropped or damaged in any way, and
  - F. When the apparatus exhibits a distinct change in performance this indicates a need for service.
16. Object and Liquid Entry  
Never push objects of any kind into the apparatus through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock.  
The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases shall be placed on the apparatus.  
Don't put candles or other burning objects on top of this unit.
17. Batteries  
Always consider the environmental issues and follow local regulations when disposing of batteries.
18. If you install the apparatus in a built-in installation, such as a bookcase or rack, ensure that there is adequate ventilation.  
Leave 20 cm (8") of free space at the top and sides and 10 cm (4") at the rear. The rear edge of the shelf or board above the apparatus shall be set 10 cm (4") away from the rear panel or wall, creating a flue-like gap for warm air to escape.

# Precautions

1. **Recording Copyright**—Unless it's for personal use only, recording copyrighted material is illegal without the permission of the copyright holder.
2. **AC Fuse**—The AC fuse inside the unit is not user-serviceable. If you cannot turn on the unit, contact your Onkyo dealer.
3. **Care**—Occasionally you should dust the unit all over with a soft cloth. For stubborn stains, use a soft cloth dampened with a weak solution of mild detergent and water. Dry the unit immediately afterwards with a clean cloth. Don't use abrasive cloths, thinners, alcohol, or other chemical solvents, because they may damage the finish or remove the panel lettering.

## 4. Power

### WARNING

BEFORE PLUGGING IN THE UNIT FOR THE FIRST TIME, READ THE FOLLOWING SECTION CAREFULLY.

AC outlet voltages vary from country to country. Make sure that the voltage in your area meets the voltage requirements printed on the unit's rear panel (e.g., AC 200-240 V, 50/60 Hz or AC 120 V, 60 Hz).

The power cord plug is used to disconnect this unit from the AC power source. Make sure that the plug is readily operable (easily accessible) at all times.

Pressing **ON/STANDBY** to select Standby mode does not fully shutdown the unit. If you do not intend to use the unit for an extended period, remove the power cord from the AC outlet.

## 5. Preventing Hearing Loss

### Caution

Excessive sound pressure from earphones and headphones can cause hearing loss.

## 6. Batteries and Heat Exposure

### Warning

Batteries (battery pack or batteries installed) shall not be exposed to excessive heat as sunshine, fire or the like.

## 7. Never Touch this Unit with Wet Hands

—Never handle this unit or its power cord while your hands are wet or damp. If water or any other liquid gets inside this unit, have it checked by your Onkyo dealer.

## 8. Handling Notes

- If you need to transport this unit, use the original packaging to pack it how it was when you originally bought it.
- Do not leave rubber or plastic items on this unit for a long time, because they may leave marks on the case.
- This unit's top and rear panels may get warm after prolonged use. This is normal.
- If you do not use this unit for a long time, it may not work properly the next time you turn it on, so be sure to use it occasionally.
- When you've finished using this unit, remove all discs and turn off the power.

## 9. Installing this Unit

- Install this unit in a well-ventilated location.
- Ensure that there's adequate ventilation all around this unit, especially if it's installed in an audio rack. If the ventilation is inadequate, the unit may over-heat, leading to malfunction.
- Do not expose this unit to direct sunlight or heat sources, because its internal temperature may rise, shortening the life of the optical pickup.
- Avoid damp and dusty places, and places subject to vibrations from loudspeakers.
- Never put the unit on top of, or directly above a loudspeaker.
- Install this unit horizontally. Never use it on its side or on a sloping surface, because it may cause a malfunction.
- If you install this unit near a TV, radio, or VCR, the picture and sound quality may be affected. If this occurs, move this unit away from the TV, radio, or VCR.

## 10. To Obtain a Clear Picture

—This unit is a hightech, precision device. If the lens on the optical pickup, or the disc drive mechanism becomes dirty or worn, the picture quality may be affected. To maintain the best picture quality, we recommend regular inspection and maintenance (cleaning or worn part replacement) every 1,000 hours of use depending on the operating environment. Contact your Onkyo dealer for details.

## 11. Moisture Condensation

**Moisture condensation may damage this unit.**

Read the following carefully:

Moisture may condense on the lens of the optical pickup, one of the most important parts inside this unit.

- Moisture condensation can occur in the following situations:
  - The unit is moved from a cold place to a warm place.
  - A heater is turned on, or cold air from an air conditioner is hitting the unit.
  - In the summer, when this unit is moved from an air conditioned room to a hot and humid place.
  - The unit is used in a humid place.
- Do not use this unit when there's the possibility of moisture condensation occurring. Doing so may damage your discs and certain parts inside this unit. If condensation does occur, remove all discs and leave this unit turned on for two to three hours. By this time, the unit will have warmed up and any condensation will have evaporated.

## 12. Region Codes

—The BD/DVD standard uses region codes to control how discs can be played around the world, the world being divided into three regions (BD) or six regions (DVD). This unit will only play BD/DVD discs that match its region code, which can be found on its rear panel.

**13. About this Manual**—This manual explains how to use all of this unit's functions. Although the BD/DVD standard offers many special features, not all discs use them all, so depending on the disc being played, this unit may not respond to certain functions. See the disc's sleeve notes for supported features.

This unit contains a semiconductor laser system and is classified as a "CLASS 1 LASER PRODUCT". So, to use this model properly, read this Instruction Manual carefully. In case of any trouble, please contact the store where you purchased the unit.

To prevent being exposed to the laser beam, do not try to open the enclosure.

### CAUTION:

CLASS 1M VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. DO NOT VIEW DIRECTLY WITH OPTICAL INSTRUMENTS.

THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

The label on the right is applied on the rear panel.



1. This unit is a CLASS 1 LASER PRODUCT and employs a laser inside the cabinet.
2. To prevent the laser from being exposed, do not remove the cover. Refer servicing to qualified personnel.

## For U.S. models

### FCC Information for User

#### CAUTION:

The user changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## For Canadian Models

**NOTE:** THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

For models having a power cord with a polarized plug:

**CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

## Modèle pour les Canadien

**REMARQUE:** CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.

Sur les modèles dont la fiche est polarisée:

**ATTENTION:** POUR ÉVITER LES CHOCS ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND.

# Introduction

## About the “O” Symbol Display

“O” may appear on your TV display during operation and indicates that the function explained in this owner’s manual is not available on that specific media.

## Symbols Used in this Manual

### Note

Indicates special notes and operating features.

### Caution

 
Indicates cautions for preventing possible damage from abuse.

A section whose title has one of the following symbols are applicable only to the disc represented by the symbol.


<b>BD</b>	BD-ROM disc
<b>DVD</b>	DVD-Video, DVD±R/RW in Video mode and finalized
<b>AVCHD</b>	DVD±R/RW in AVCHD format
<b>CD</b>	Audio CDs
<b>MOVIE</b>	Movie files contained in the USB/Disc
<b>MUSIC</b>	Music files contained in the USB/Disc
<b>PHOTO</b>	Photo files

## Supplied Accessories

Video cable (1)




Audio cables (1)

 

Remote control (1)



 Battery (1)



Netflix Box-insert (1)



## Playable Discs



Blu-ray Disc

- Discs such as movies that can be purchased or rented.
- BD-R/RE discs that contain Movie, Music or Photo files.



DVD-VIDEO (8 cm / 12 cm disc)

- Discs such as movies that can be purchased or rented.



DVD±R (8 cm / 12 cm disc)

- Video mode and finalized only
- Supports the dual layer disc also
- Finalized AVCHD format
- DVD±R discs that contain Movie, Music or Photo files.



DVD-RW (8 cm / 12 cm disc)

- Video mode and finalized only
- Finalized AVCHD format
- DVD-RW discs that contain Movie, Music or Photo files.



DVD+ReWritable

DVD+RW (8 cm / 12 cm disc)

- Video mode and finalized only
- Finalized AVCHD format
- DVD+RW discs that contain Movie, Music or Photo files.



Audio CD (8 cm / 12 cm disc)



CD-R/RW (8 cm / 12 cm disc)

- CD-R/RW discs that contain audio titles, Movie, Music or Photo files.

### Note

- Depending on the conditions of the recording equipment or the CD-R/RW (or DVD±R/RW) disc itself, some CD-R/RW (or DVD±R/RW) discs cannot be played on the unit.
- Depending on the recording software & the finalization, some recorded discs (CD-R/RW, DVD±R/RW or BD-R/RE) may not be playable.
- BD-R/RE, DVD±R/RW and CD-R/RW discs recorded using a personal computer or a DVD or CD Recorder may not play if the disc is damaged or dirty, or if there is dirt or condensation on the player’s lens.
- If you record a disc using a personal computer, even if it is recorded in a compatible format, there are cases in which it may not play because of the settings of the application software used to create the disc. (Check with the software publisher for more detailed information.)
- This player requires discs and recordings to meet certain technical standards in order to achieve optimal playback quality.
- Pre-recorded DVDs are automatically set to these standards. There are many different types of recordable disc formats (including CD-R containing MP3 or WMA files) and these require certain pre-existing conditions to ensure compatible playback.

- Hybrid discs have both BD-ROM and DVD (or CD) layers on one side. On such discs, BD-ROM layer will be only played back in this player.
- Customers should note that permission is required in order to download MP3 / WMA files and music from the Internet. Our company has no right to grant such permission. Permission should always be sought from the copyright owner.
- You have to set the disc format option to “**Mastered**” in order to make the discs compatible with the Onkyo players when formatting rewritable discs. When setting the option to Live System, you cannot use it on the Onkyo player. (Mastered/Live File System: Disc format system for windows Vista)

## File compatibility

### Overall

**Available File extensions:** “.jpg”, “.jpeg”, “.png”, “.avi”, “.divx”, “.mpg”, “.mpeg”, “.mp4”, “.mp3”, “.wma”

- The name of folder and file can be displayed up to 8 characters.
- Depending on the size and number of the files, it may take several minutes to read the contents on the media.

**Maximum Files/Folder:** Less than 2000 (total number of files and folders)

**CD-R/RW, DVD±R/RW, BD-R/RE Format:**  
ISO 9660+JOLIET, UDF and UDF Bridge format

### MOVIE

**Playable File format:** “DIVX3.xx”, “DIVX4.xx”, “DIVX5.xx”, “XVID”, “DIVX6.xx” (Standard playback only), DivX HD ver 1.1, H.264/MPEG-4 AVC

**Available resolution size:** 1920 × 1080 (W × H) pixels

**Playable Audio format:** “Dolby Digital”, “DTS”, “MP3”, “WMA”, “AAC”, “AC3”

- Not all the WMA and AAC Audio formats are compatible with this unit.

**Sampling frequency:** within 32 - 48 kHz (WMA), within 16 - 48 kHz (MP3)

**Bit rate:** within 20 - 320 kbps (WMA), within 32 - 320 kbps (MP3)

**Playable subtitle:** .smi (.SMI), .srt (.SRT), .sub (.SUB), .ssa (.SSA), .txt (.TXT). ( .sub (.SUB) and .txt (.TXT) files may not be recognised. )

#### Note

- HD movie files contained on the CD or USB 1.0/1.1 may not play properly. BD, DVD or USB 2.0 are recommended to play back HD movie files.
- This player support H.264/MPEG-4 AVC profile Main, High at Level 4.1. For a file with higher level, the warning message will appear on the screen.
- This player does not support the files that are recorded with GMC\*1 or Qpel\*2. Those are video encoding techniques in MPEG4 standard, like DivX or XVID have.

\*1 GMC – Global Motion Compensation

\*2 Qpel – Quarter pixel

## MUSIC

**Sampling frequency:** within 8 - 48 kHz (WMA), within 11 - 48 kHz (MP3)

**Bit rate:** within 8 - 320 kbps (WMA, MP3)

#### Note

- This unit cannot support the ID3 Tag embedded MP3 file.
- The total playback time indicated on the screen may not be correct for VBR files.

## PHOTO

### Recommended size:

Less than 4,000 × 3,000 × 24 bit/pixel

Less than 3,000 × 3,000 × 32 bit/pixel

#### Note

- Progressive and lossless compression photo image files are not supported.
- Photo image files larger than 4 MB are not supported.

## Region Code

Both the Blu-ray Disc Player and the discs are coded by region. These regional codes must match in order to play the disc. If the codes do not match, the disc will not play. The Region Number for this Blu-ray Disc Player is described on the rear panel of the Blu-ray Disc Player.

Blu-ray Disc Region Code	Area
A	North America, Central America, South America, Korea, Japan, Taiwan, Hong Kong and South East Asia
B	Europe, Greenland, French territories, Middle East, Africa, Australia and New Zealand
C	India, China, Russia, Central and South Asia

DVD Region Code	Area
1	The U.S., U.S. territories and Canada
2	Europe, Japan, the Middle East, Egypt, South Africa, Greenland
3	Taiwan, Korea, the Philippines, Indonesia, Hong Kong
4	Mexico, South America, Central America, Australia, New Zealand, Pacific islands, Caribbean
5	Russia, Eastern Europe, India, most of Africa, North Korea, Mongolia
6	China

## **AVCHD (Advanced Video Codec High Definition)**

- This player can playback AVCHD format discs. These discs are normally recorded and used in camcorders.
- The AVCHD format is a high definition digital video camera format.
- The MPEG-4 AVC/H.264 format is capable of compressing images at higher efficiency than that of the conventional image compressing format.
- Some AVCHD discs use the “x.v.Color” format.
- This player can playback AVCHD discs using “x.v.Color” format.
- Some AVCHD format discs may not play depending on the recording condition.
- AVCHD format discs need to be finalized.
- “x.v.Color” offers a wider color range than normal DVD camcorder discs.

## **Certain System Requirements**

For high definition video playback:

- High definition display that has COMPONENT or HDMI input jacks.
- BD-ROM disc with high definition content.
- HDMI or HDCP capable DVI input on your display device is required for some content (as specified by disc authors).
- For up-conversion of standard definition DVD, a HDMI or HDCP capable DVI input on your display device is required for copy protected content.

For Dolby® Digital Plus, Dolby TrueHD and DTS-HD multi-channel audio playback:

- HDMI connection (→ 11)
- An amplifier/receiver with a built-in (Dolby Digital Plus, Dolby TrueHD and DTS-HD) decoder.
- Main, center, surround speakers and subwoofer as necessary for chosen format.

## **Compatibility Notes**

- Because BD-ROM is a new format, certain disc, digital connection and other compatibility issues are possible. If you experience compatibility problems, please contact an authorized Customer Service Center.
- Viewing high-definition content and up-converting standard DVD content may require a HDMI-capable input or HDCP-capable DVI input on your display device.
- Some BD-ROM and DVD discs may restrict the use of some operation commands or features.
- Dolby TrueHD, Dolby Digital Plus and DTS-HD are supported with maximum 7.1 channels if you use HDMI connection for the audio output of the unit.
- You can use a USB device that is used to store some disc related information, including downloaded on-line content. The disc you are using will control how long this information is retained.

## **Copyright**

- It is forbidden by law to copy, broadcast, show, broadcast on cable, play in public, or rent copyrighted material without permission. Commercial BD-Video/DVD-Video discs are copy-protected, and any recordings made from these discs will be distorted. This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

## **Netflix**

- With this unit, you can enjoy movies and TV episodes streamed instantly from Netflix via the Internet. In order to use this feature, you must visit [netflix.com/Onkyo](http://netflix.com/Onkyo) on your PC and become a Netflix member.  
(This feature is available only in the United States.)

# Contents

## Safety Information

Important Safety Instructions.....	2
Precautions .....	3

## Preparation

<b>Introduction</b> .....	5
About the “O” Symbol Display .....	5
Symbols Used in this Manual.....	5
Supplied Accessories.....	5
Playable Discs .....	5
File compatibility .....	6
Region Code .....	6
AVCHD (Advanced Video Codec High Definition) .....	7
Certain System Requirements .....	7
Compatibility Notes .....	7
Copyright.....	7
Netflix .....	7
<b>Remote control</b> .....	9
<b>Front panel</b> .....	10
<b>Rear panel</b> .....	10

## Installation

<b>Connecting to Your TV</b> .....	11
HDMI Connection.....	11
Component Video Connection .....	12
Video/Audio (Left/Right) Connection.....	13
Resolution Setting.....	13
<b>Connecting to an AV receiver</b> .....	14
Connecting to an AV receiver via HDMI Output.....	14
Connecting to an AV receiver via Digital Audio Output.....	15
Connecting to an AV receiver via 2 Channel Audio Output .....	15
<b>Connecting to your Home Network</b> .....	16
Wired network connection.....	16
Wired Network Setup .....	16
<b>USB device connection</b> .....	18
Playback content in the USB device .....	18
<b>Settings</b> .....	19
Adjust the Setup Settings.....	19
<b>DISPLAY</b> Menu .....	19
<b>LANGUAGE</b> Menu .....	20
<b>AUDIO</b> Menu .....	20
<b>LOCK</b> Menu .....	21
<b>NETWORK</b> Menu .....	21
<b>OTHERS</b> Menu .....	22

## Operation

<b>General Playback</b> .....	23
Playing Discs.....	23
Using the disc menu.....	23
Resume playback.....	23
<b>Advanced Playback</b> .....	24
Repeat Playback .....	24
Repeating a specific portion .....	24
Enlarge the playback image .....	24
Marker Search.....	24
Using the search menu .....	25
Last Scene Memory .....	25
<b>On-Screen display</b> .....	26
Displaying content information on-screen .....	26
Playing from selected time .....	26
Hearing different audio .....	26
Selecting a subtitle language .....	27
Watching from a different angle .....	27
Changing the TV Aspect Ratio.....	27
Changing the Picture Mode.....	27
<b>Enjoying BD-LIVE</b> .....	28
<b>Enjoying Netflix</b> .....	28
Activating the Connection to Netflix .....	28
Watching Streaming Movies .....	28
<b>Playing a movie file</b> .....	29
Selecting a subtitle file .....	29
Changing subtitle code page.....	29
<b>Viewing a photo</b> .....	30
Options while viewing a photo.....	30
Listening to music during a slide show.....	31
<b>Listening to music</b> .....	31

## Maintenance

<b>Notes on Discs</b> .....	32
<b>Handling the Unit</b> .....	32

## Troubleshooting


<b>Troubleshooting</b> .....	33
General .....	33
Picture .....	33
Sound.....	33
Network .....	33
Netflix .....	34

## Appendix


<b>Controlling an AV receiver with the Supplied Remote Control</b> .....	35
<b>Area Code List</b> .....	35
<b>Language Code List</b> .....	36
<b>Subtitle Code List</b> .....	37
<b>Trademarks and Licenses</b> .....	38
<b>Audio Output Specifications</b> .....	39
<b>Video Output Resolution</b> .....	40
<b>Specifications</b> .....	41
<b>Open source software notice</b> .....	42
<b>Network Service Disclaimer</b> .....	43



# Remote control

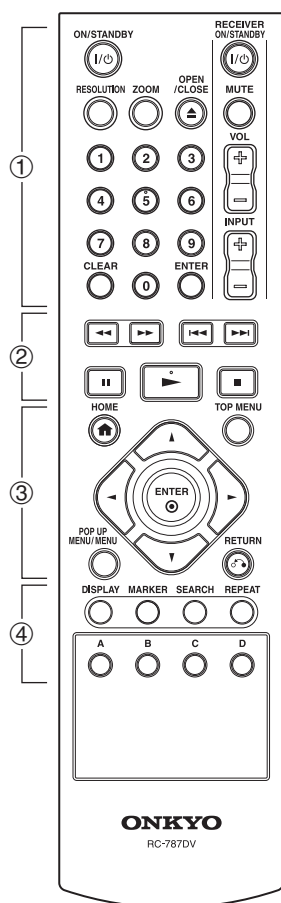

## Battery Installation

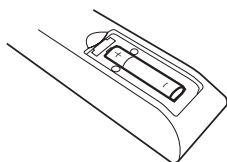

Remove the battery cover on the rear of the Remote Control, and insert a R03 (size AAA) battery with “+” and “-” matched correctly.

①

### ON/STANDBY button

Switches the player ON or STANDBY.

### RESOLUTION button

Set the output resolution for **HDMI OUT** and **VIDEO OUTPUT (COMPONENT)** jacks.

### ZOOM button

Displays or exits the “Zoom” menu.

### OPEN/CLOSE button

Opens and closes the disc tray.

### 0-9 numerical buttons

Selects numbered options in a menu or inputs letters in the keypad menu.

### CLEAR button

Removes a mark on the search menu or a number when setting the password.

### ENTER button

Acknowledges menu selection.

### RECEIVER control buttons

(→ 35)

②

### (SCAN) buttons

Searches backward or forward.

### (SKIP) buttons

Goes to the next or previous chapter / track / file.

### (PAUSE) button

Pauses playback.

### (PLAY) button

Starts playback.

### (STOP) button

Stops playback.

③

### HOME button

Displays or exits the “Home Menu”.

### TOP MENU button

Accesses menu on a disc.

### Direction (, , , ) buttons

Selects an option in the menu.

### ENTER button

Acknowledges menu selection.

### POP UP MENU/MENU button

Displays the DVD title menu or BD-ROM’s pop-up menu, if available.

### RETURN button

Exits the menu or resumes playback. The resume play function may not work depending on the BD-ROM disc.

④

### DISPLAY button

Displays or exits On-Screen Display.

### MARKER button

Marks any point during playback.

### SEARCH button

Displays or exits the search menu.


### REPEAT button

Repeats a desired section or sequence.

### Colored (A, B, C, D) buttons


Use to navigate BD-ROM menus. They are also used for “MOVIE”, “PHOTO” and “MUSIC” menu.

# Front panel

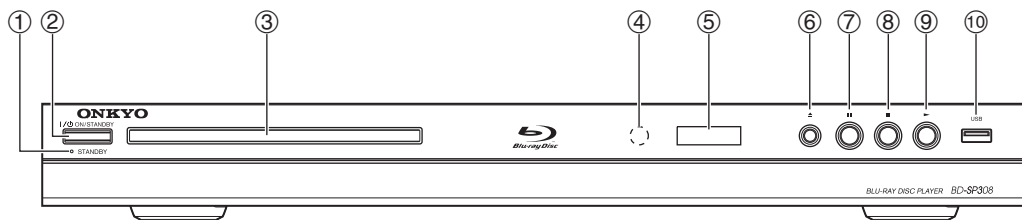

- |                                 |                                |
|---------------------------------|--------------------------------|
| ① <b>STANDBY indicator</b>      | ⑥ <b>▲ (OPEN/CLOSE) button</b> |
| ② <b>I/ON ON/STANDBY button</b> | ⑦ <b>   (PAUSE) button</b>     |
| ③ <b>Disc tray</b>              | ⑧ <b>■ (STOP) button</b>       |
| ④ <b>Remote sensor</b>          | ⑨ <b>▶ (PLAY) button</b>       |
| ⑤ <b>Display window</b>         | ⑩ <b>USB port</b>              |

# Rear panel

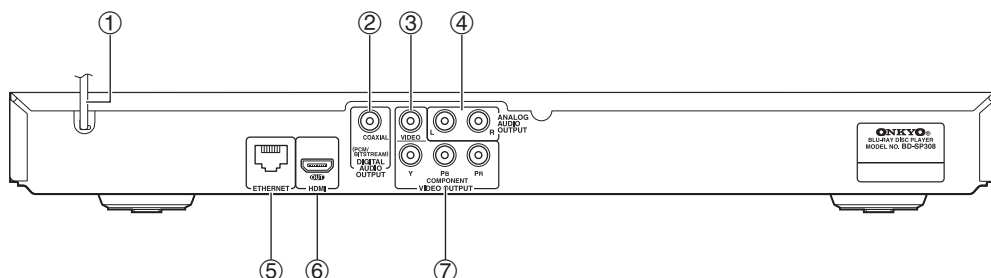

- |   |  |
|---|--|
| ① <b>AC power cord</b>                          | ⑤ <b>ETHERNET port</b>                       |
| ② <b>DIGITAL AUDIO OUTPUT (COAXIAL) jack</b>    | ⑥ <b>HDMI OUT jack (Type A, Version 1.3)</b> |
| ③ <b>VIDEO OUTPUT (VIDEO) jack</b>              | ⑦ <b>VIDEO OUTPUT (COMPONENT) jacks</b>      |
| ④ <b>ANALOG AUDIO OUTPUT (Left/Right) jacks</b> |  |

# Connecting to Your TV

Make one of the following connections, depending on the capabilities of your existing equipment.

- HDMI connection (→ 11)
- Component Video connection (→ 12)
- Video/Audio (Left/Right) Connection (→ 13)


## Note

- Depending on your TV and other equipment you wish to connect, there are various ways you could connect the player. Use only one of the connections described in this manual.
- Please refer to the manuals of your TV, Stereo System or other devices as necessary to make the best connections.
- Do not connect the player's **ANALOG AUDIO OUTPUT** jack to the phono in jack (record player) of your audio system.
- Do not connect your player via your VCR. The image could be distorted by the copy protection system.

## HDMI Connection


If you have a HDMI TV or monitor, you can connect it to this player using a HDMI cable (Type A, Version 1.3). Connect the HDMI jack on the player to the **HDMI OUT** jack on a HDMI compatible TV or monitor.

## HDMI Connection

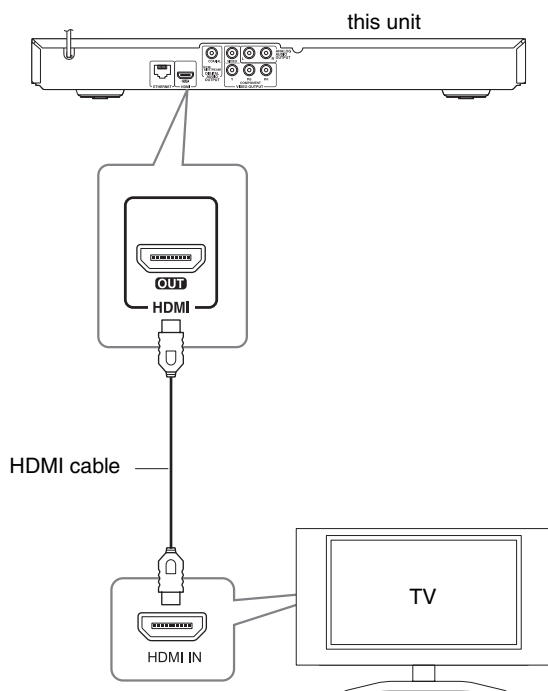

Set the TV's source to HDMI (refer to TV's Owner's manual).

## HDMI-DVI Connection

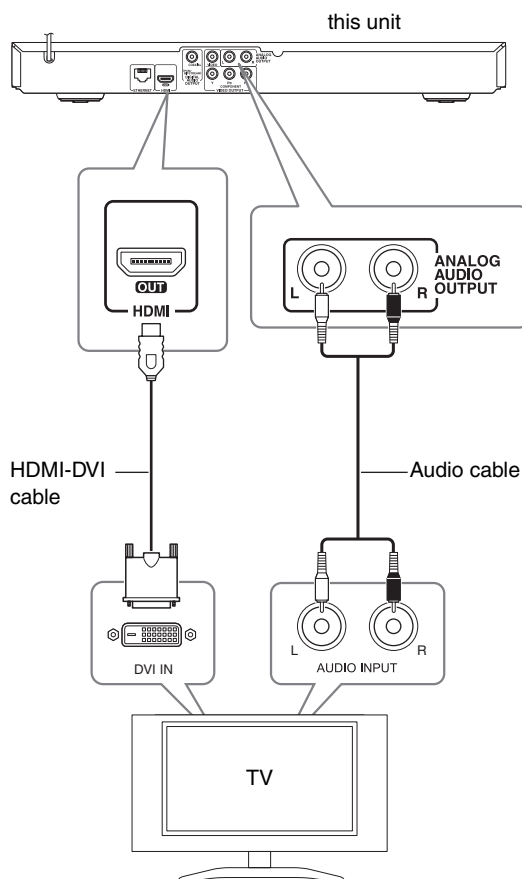

## Note

- If a connected HDMI device does not accept the audio output of the player, the HDMI device's audio sound may be distorted or may not output.
- When you use HDMI connection, you can change the resolution for the HDMI output. Refer to "Resolution Setting" (→ 13).
- Select the type of video output from the **HDMI OUT** jack using "**HDMI Color Setting**" option on the "**Setup**" menu (→ 20).
- Changing the resolution when the connection has already been established may result in malfunctions. To solve the problem, turn off the player and then turn it on again.
- When the HDMI connection with HDCP is not verified, TV screen is changed to black screen. In this case, check the HDMI connection, or disconnect the HDMI cable.
- If there are noises or lines on the screen, please check the HDMI cable (length is generally limited to 4.5 m).


### ■ Additional Information for HDMI

- When you connect a HDMI or DVI compatible device, make sure of the following:
  - Try switching off the HDMI/DVI device and this player. Next, switch on the HDMI/DVI device and leave it for around 30 seconds, then switch on this player.
  - The connected device's video input is set correctly for this unit.
  - The connected device is compatible with 720x480p, 1280x720p, 1920x1080i or 1920x1080p video input.
- Not all HDCP-compatible HDMI or DVI devices will work with this player.
  - The picture will not be displayed properly with non-HDCP device.
  - This player does not playback and TV screen is changed to black screen.

### Component Video Connection

Connect the **VIDEO OUTPUT (COMPONENT)** jacks on the player to the corresponding input jacks on the TV using component video cable. Connect the left and right **ANALOG AUDIO OUTPUT** jacks of the player to the audio left and right **IN** jacks on the TV using the audio cables.

### Component Video/Audio Connection

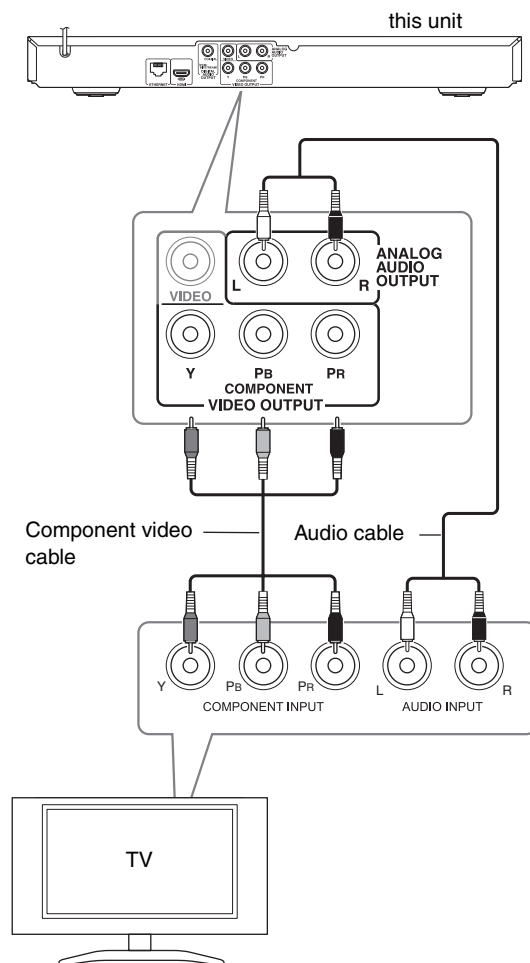


#### Note

- When you use **VIDEO OUTPUT (COMPONENT)** connection, you can change the resolution for the output. Refer to "Resolution Setting" (→ 13).

## Video/Audio (Left/Right) Connection

Connect the **VIDEO OUTPUT (VIDEO)** jack on the player to the video in jack on the TV using a video cable. Connect the left and right **ANALOG AUDIO OUTPUT** jacks of the player to the audio left and right **IN** jacks on the TV using the audio cables.

### Video/Audio Connection

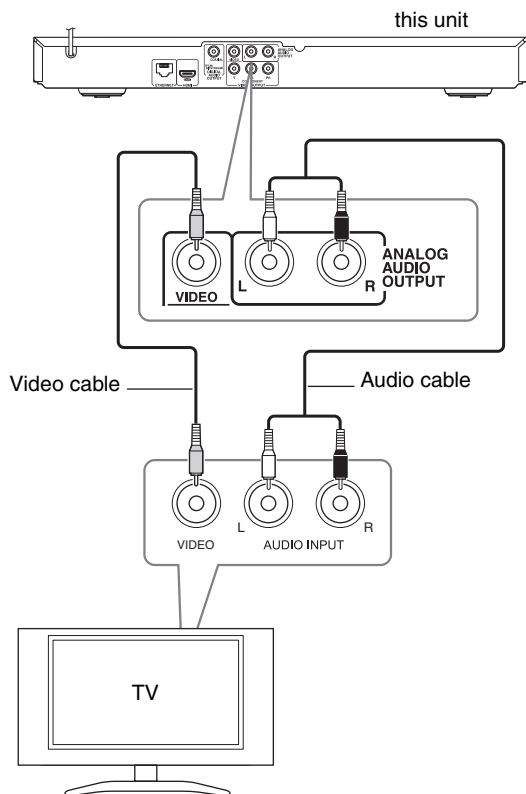


## Resolution Setting

The player provides several output resolutions for **HDMI OUT** and **VIDEO OUTPUT (COMPONENT)** jacks. You can change the resolution using “Setup” menu.


**1** Press **HOME** (🏠).

**2** Use **◀/▶** to select the “Setup” and press **ENTER** (Ⓢ).


The “Setup” menu appears.

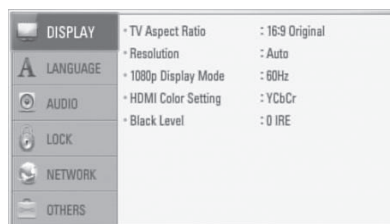

**3** Use **▲/▼** to select “DISPLAY” option then press **▶** to move to the second level.

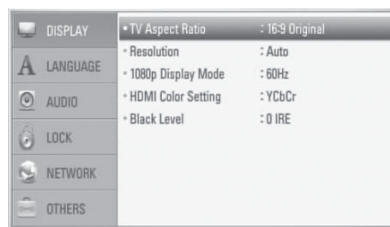

**4** Use **▲/▼** to select the “Resolution” option then press **ENTER** (Ⓢ) to move to the third level.

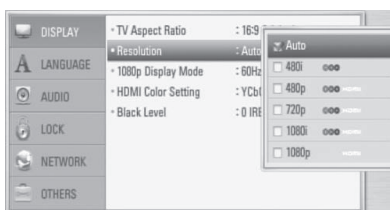

**5** Use **▲/▼** to select the desired resolution then press **ENTER** (Ⓢ) to confirm your selection.

You can select settings marked with “ⓈⓈⓈ” for a component video connection. You can select settings marked with “HDMI” for an HDMI connection.

### Note

- If your TV does not accept the resolution you have set on the player, you can set resolution to 480p as follows:
  - Press **OPEN/CLOSE** (⬆) to open the disc tray.
  - Press **■** (STOP) for more than 5 seconds.
- Since several factors affect the resolution of video output, see “Video Output Resolution” (→ 40).

# Connecting to an AV receiver

Make one of the following connections, depending on the capabilities of your existing equipment.

- HDMI Audio connection (→ 14)
- Digital Audio connection (→ 15)
- 2CH Analog Audio connection (→ 15)

Since many factors affect the type of audio output, see “Audio Output Specifications” for details (→ 39).


## About Digital Multi-channel sound

A digital multi-channel connection provides the best sound quality. For this, you need a multi-channel AV receiver that supports one or more of the audio formats supported by your player. Check the AV receiver manual and the logos on the front of the receiver. (PCM Stereo, PCM Multi-Ch, Dolby Digital, Dolby Digital Plus, Dolby TrueHD, DTS and/or DTS-HD)

## Connecting to an AV receiver via HDMI Output

Connect the player’s **HDMI OUT** jack to the corresponding jack on your AV receiver using a HDMI cable. You will need to activate the player’s digital output. See “AUDIO Menu” (→ 20–21).

## HDMI Connection

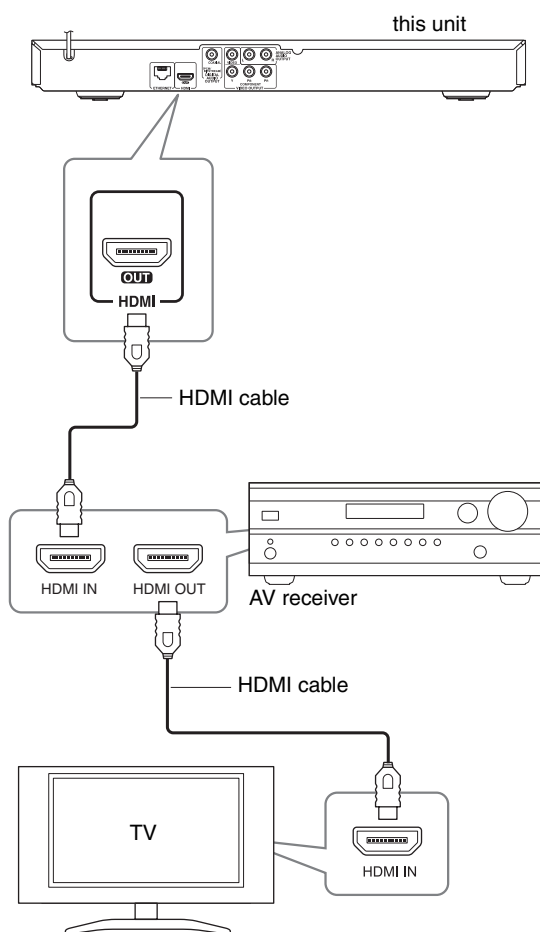


Connect the AV receiver’s HDMI OUT jack to HDMI input jack on your TV using a HDMI cable.

## Connecting to an AV receiver via Digital Audio Output

Connect the player's **DIGITAL AUDIO OUTPUT** jack to the corresponding in jack (COAXIAL) on your AV receiver. Use an optional digital audio cable. You will need to activate the player's digital output. See "AUDIO Menu" (→ 20–21).


### Digital Audio Connection

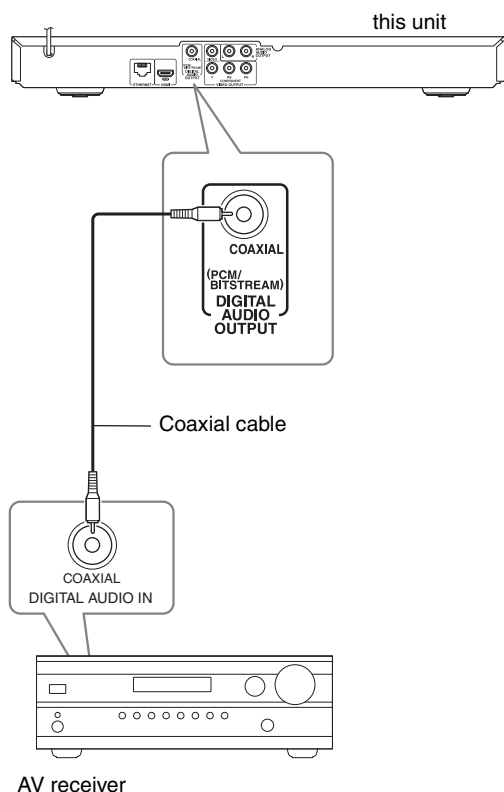

## Connecting to an AV receiver via 2 Channel Audio Output

Connect the Left and Right **ANALOG AUDIO OUTPUT** jacks on the player to the audio left and right in jacks on your AV receiver using audio cables.

### 2CH Analog Audio Connection

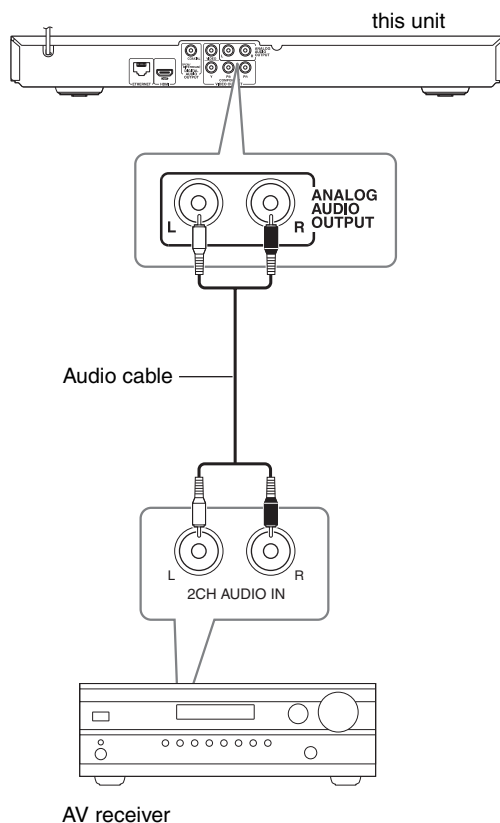

# Connecting to your Home Network

This player can be connected to a local area network (LAN) via the **ETHERNET** port on the rear panel.

By connecting the unit to a broadband home network, you have access to services such as BD-LIVE interactivity, Netflix and software updates.


## Wired network connection

Connect the player's **ETHERNET** port to the corresponding port on your Modem or Router using a commercially available LAN or Ethernet cable (CAT5 or better with RJ45 connector).

### Note

- When plugging or unplugging the LAN cable, hold the plug portion of the cable. When unplugging, do not pull on the LAN cable but unplug while pressing down on the lock.
- Do not connect a modular phone cable to the **ETHERNET** port.
- Since there are various connection configurations, please follow the specifications of your telecommunication carrier or internet service provider.

## Wired Network Connection

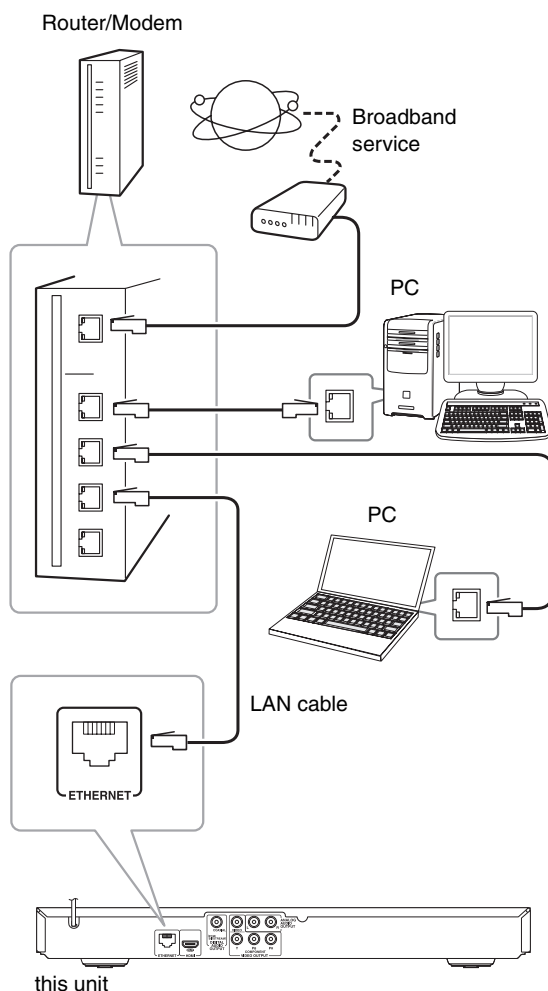


## Wired Network Setup

If there is a DHCP server on the local area network (LAN) via wired connection, this player will automatically be allocated an IP address. After making the physical connection, a small number of home networks may require the player's network setting to be adjusted. Adjust the "**NET-WORK**" setting as follow.

### ■ Preparation


Before setting the wired network, you need to connect the broadband internet to your home network.

- 1 Select "**Connection Setting**" option in the "**Setup**" menu then press **ENTER** (Ⓢ).

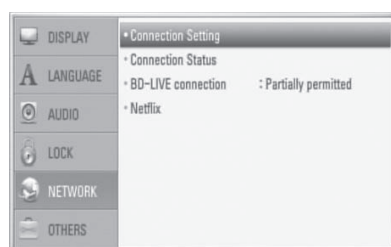

- 2 Use **▲/▼/◀/▶** select the IP mode between "**Dynamic**" and "**Static**".

Normally, select "**Dynamic**" to allocate an IP address automatically.

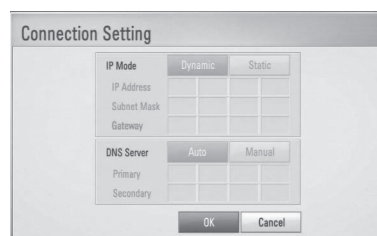

### Note

- If there is no DHCP server on the network and you want to set the IP address manually, select "**Static**" then set "**IP Address**", "**Subnet Mask**", "**Gateway**" and "**DNS Server**" using **▲/▼/◀/▶** and numerical buttons. If you make a mistake while entering a number, press **CLEAR** to clear the highlighted part.

- 3 Select "**OK**" and press **ENTER** (Ⓢ) to apply network settings.


The player will ask you to test the network connection.

- 4 Select "**OK**" and press **ENTER** (Ⓢ) to complete the network connection.



## 5 If you select “Test” and press ENTER (Ⓢ) at step 4 above, the network connection status is displayed on the screen.

You can also test it on the “Connection Status” in the “Setup” menu.

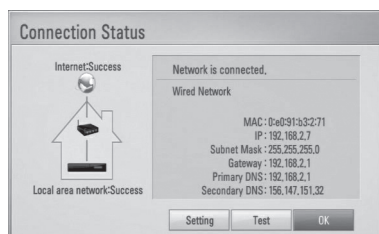

## Notes on Network Connection:

- Many network connection problems during set up can often be fixed by re-setting the router or modem. After connecting the player to the home network, quickly power off and/or disconnect the power cable of the home network router or cable modem. Then power on and/or connect the power cable again.
- Depending on the internet service provider (ISP), the number of devices that can receive internet service may be limited by the applicable terms of service. For details, contact your ISP.
- Our company is not responsible for any malfunction of the player and/or the internet connection feature due to communication errors/malfunctions associated with your broadband internet connection, or other connected equipment.
- The features of BD-ROM discs made available through the Internet Connection feature are not created or provided by our company, and our company is not responsible for their functionality or continued availability. Some disc related material available by the Internet Connection may not be compatible with this player. If you have questions about such content, please contact the producer of the disc.
- Some internet contents may require a higher bandwidth connection.
- Even if the player is properly connected and configured, some internet content may not operate properly because of internet congestion, the quality or bandwidth of your internet service, or problems at the provider of the content.
- Some internet connection operations may not be possible due to certain restrictions set by the Internet service provider (ISP) supplying your broadband Internet connection.
- Any fees charged by an ISP including, without limitation, connection charges are your responsibility.
- A 10 Base-T or 100 Base-TX LAN port is required for wired connection to this player. If your internet service does not allow for such a connection, you will not be able to connect the player.
- You must use a Router to use xDSL service.
- A DSL modem is required to use DSL service and a cable modem is required to use cable modem service. Depending on the access method of and subscriber agreement with your ISP, you may not be able to use the internet connection feature contained in this player or you may be limited to the number of devices you can connect at the same time. (If your ISP limits subscription to one device, this player may not be allowed to connect when a PC is already connected.)
- The use of a “Router” may not be allowed or its usage may be limited depending on the policies and restrictions of your ISP. For details, contact your ISP directly.

# USB device connection

This unit can play movie, music and photo files contained in the USB device.

## Playback content in the USB device


### 1 Insert a USB device to the USB port until it fits into place.

When you connect the USB device on the HOME menu, the player plays a music file contained in the USB storage device automatically. If the USB storage device contains various types of files, a menu for the file type selection will appear.

File loading may take few minutes depending on the amount of content stored in the USB storage device. Press **ENTER** (⊙) while “Cancel” is selected to stop loading.

### 2 Press HOME (⬆).


### 3 Select “Movie”, “Photo” or “Music” using ◀/▶, and press ENTER (⊙).

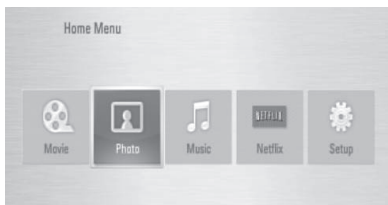

### 4 Select the “USB” option using ◀/▶, and press ENTER (⊙).



### 5 Select a file using ▲/▼/◀/▶, and press PLAY or ENTER (⊙) to play the file.

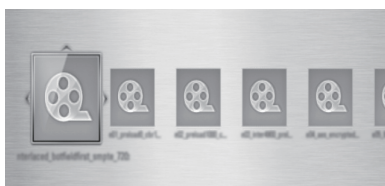

### 6 Withdraw the USB device carefully.

#### Note


- This unit supports USB flash memory formatted in FAT16, FAT32 and NTFS when accessing files (music, photo, movie). However, for BD-LIVE, only FAT16 and FAT32 formats are supported. Use the USB flash memory formatted in either FAT16 or FAT32 when using BD-LIVE.
- This unit can support up to 16 GB capacity of the USB flash memory.
- The USB device can be used for the local storage for enjoying BD-LIVE discs with Internet.
- This unit can support up to 4 partitions of the USB device.
- Do not remove the USB device during operation (play, etc.).
- A USB device which requires additional program installation when you have connected it to a computer, is not supported.
- USB device: USB device that supports USB1.1 and USB2.0.
- Movie, music and photo files can be played. For details of operations on each file, refer to relevant pages.
- Regular back up is recommended to prevent data loss.
- If you use a USB extension cable, USB HUB or USB Multi-reader, the USB device may not be recognized.
- Some USB device may not work with this unit.
- Digital camera and mobile phone are not supported.
- USB Port of the unit cannot be connected to PC. The unit cannot be used as a storage device.

# Settings

## Adjust the Setup Settings


You can change the settings of the player in the “Setup” menu.

### 1 Press HOME (🏠).

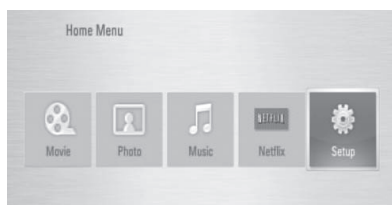

### 2 Use ◀/▶ to select the “Setup” and press ENTER (⊙).


The “Setup” menu appears.

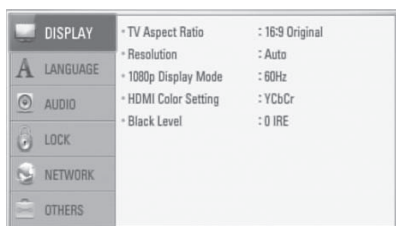

### 3 Use ▲/▼ to select the first setup option, and press ▶ to move to the second level.



### 4 Use ▲/▼ to select a second setup option, and press ENTER (⊙) to move to the third level.

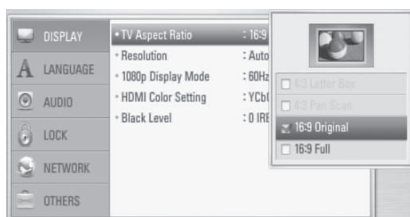

### 5 Use ▲/▼ to select a desired setting, and press ENTER (⊙) to confirm your selection.

## DISPLAY Menu

### TV Aspect Ratio

Select a TV aspect ratio option according to your TV type.

#### ▶ 4:3 Letter Box:

Select when a standard 4:3 TV is connected.

Displays theatrical images with masking bars above and below the picture.

#### ▶ 4:3 Pan Scan:

Select when a standard 4:3 TV is connected.

Displays pictures cropped to fill your TV screen.

Both sides of the picture are cut off.

#### ▶ 16:9 Original:

Select when a 16:9 wide TV is connected.

The 4:3 picture is displayed with an original 4:3 aspect ratio, with black bars appearing at the left and right sides.

#### ▶ 16:9 Full:

Select when a 16:9 wide TV is connected.

The 4:3 picture is adjusted horizontally (in a linear proportion) to fill the entire screen.

#### Note

- You cannot select “4:3 Letter Box” and “4:3 Pan Scan” option when the resolution is set to higher than 720p.

## Resolution

Sets the output resolution of the Component and HDMI video signal. Refer to page 13 and 40 for details about the resolution setting.

#### ▶ Auto:

If the **HDMI OUT** jack is connected to TVs providing display information (EDID), automatically selects the resolution best suited to the connected TV. If the **VIDEO OUTPUT (COMPONENT)** is only connected, this changes the resolution to 1080i as default resolution.

#### ▶ 1080p:

Outputs 1080 lines of progressive video.

#### ▶ 1080i:

Outputs 1080 lines of interlaced video.

#### ▶ 720p:

Outputs 720 lines of progressive video.

#### ▶ 480p:

Outputs 480 lines of progressive video.

#### ▶ 480i:

Outputs 480 lines of interlaced video.

## 1080p Display Mode

When the resolution is set to 1080p, select “**24 Hz**” for smooth presentation of film material (1080p/24 Hz) with a HDMI-equipped display compatible with 1080p/24 Hz input.

### Note

- When you select “**24 Hz**”, you may experience some picture disturbance when the video switches video and film material. In this case, select “**60 Hz**”.
- Even when “**1080p Display Mode**” is set to “**24 Hz**”, if your TV is not compatible with 1080p/24 Hz, the actual frame frequency of the video output will be 60 Hz to match the video source format.

## HDMI Color Setting

Select the type of output from the **HDMI OUT** jack. For this setting, please refer to the manuals of your display device.

- ▶ **YCbCr:**  
Select when connecting to a HDMI display device.
- ▶ **RGB:**  
Select when connecting to a DVI display device.

## Black Level

With this setting you can adjust the picture blackness for the analog video outputs. It does not affect the component video output.

- ▶ **0 IRE:**  
Blacks are darker, and the entire picture becomes darker.
- ▶ **7.5 IRE:**  
Blacks are lighter, and the entire picture becomes lighter.

## LANGUAGE Menu

### Display Menu

Select a language for the “**Setup**” menu and on-screen display.

### Disc Menu/Disc Audio/Disc Subtitle

Select the language you prefer for the audio track (disc audio), subtitles, and the disc menu.

- ▶ **Original:**  
Refers to the original language in which the disc was recorded.
- ▶ **Other:**  
Press **ENTER** (⊙) to select another language. Use number buttons then press **ENTER** (⊙) to enter the corresponding 4-digit number according to the language code list (→ **36**).
- ▶ **Off** (Disc Subtitle only):  
Turn off Subtitle.

### Note

- Depending on the disc, your language setting may not work.

## AUDIO Menu

Each disc has a variety of audio output options. Set the player’s Audio options according to the type of audio system you use.

### Note

- Since many factors affect the type of audio output, see “Audio Output Specifications” for details (→ **39**).

## HDMI / Digital Output

Select the output sound format when a device equipped with a HDMI or Digital Audio input jack is connected to the **HDMI OUT** or **DIGITAL AUDIO OUTPUT** jack on this player.

### ▶ PCM Stereo:

Select if you connect this unit’s **HDMI OUT** or **DIGITAL AUDIO OUTPUT** jack to a device with two-channel digital stereo decoder.

### ▶ PCM Multi-Ch (HDMI only):

Select if you connect this unit’s **HDMI OUT** jack to a device with multi-channel digital decoder.

### ▶ DTS Re-Encode:

Select if you connect this unit’s **HDMI OUT** or **DIGITAL AUDIO OUTPUT** jack to a device with DTS decoder.

### ▶ Primary Pass-Thru:

Select if you connect this unit’s **DIGITAL AUDIO OUTPUT** and **HDMI OUT** jack to a device with LPCM, Dolby Digital, Dolby Digital Plus, Dolby TrueHD, DTS and DTS-HD decoder.

### Note

- When “**HDMI**” option is set to “**PCM Multi-Ch**”, the audio may output as PCM Stereo if the PCM Multi-Ch information is not detected from HDMI device with EDID.
- If the “**HDMI**” or “**Digital Output**” option is set to “**DTS Re-Encode**”, the DTS Re-encode audio is output for BD-ROM discs with secondary audio and the original audio is output for the other discs (like “**Primary Pass-Thru**”).

## Sampling Freq. (Digital Audio Output)

### ▶ 192 kHz:

Select this if your AV receiver is capable of handling 192 kHz signals.

### ▶ 96 kHz:

Select this if your AV receiver is not capable of handling 192 kHz signals.

When this choice is made, this unit automatically converts any 192 kHz signals to 96 kHz so your system can decode them.

### ▶ 48 kHz:

Select this if your AV receiver is not capable of handling 192 kHz and 96 kHz signal. When this choice is made, this unit automatically converts any 192 kHz and 96 kHz signals to 48 kHz so your system can decode them.

Check the documentation for your AV receiver to verify its capabilities.

## DRC (Dynamic Range Control)

When a title encoded in Dolby Digital or Dolby Digital Plus is playing back, you may wish to compress the dynamic range of the audio output (the difference between the loudest sounds and the quietest ones). This allows you to listen to a movie at a lower volume without losing clarity of sound. Set “**DRC**” to “**On**” for this effect.

### Note

- The DRC setting can be changed only when a disc is not inserted or the unit is in complete stop mode.

## LOCK Menu

The “**LOCK**” settings affect only BD and DVD playback. To access the any features in “**LOCK**” settings, you must enter the 4-digit security code you have created.

If you have not entered a password yet, you are prompted to do so. Enter a 4-digit password twice, and press

**ENTER** (⊙) to create a new password.

## Password

You can create, or change the password.

### ▶ None:

Enter a 4-digit password twice, and press

**ENTER** (⊙) to create a new password.

### ▶ Change:

Enter the current password and press **ENTER** (⊙).

Enter a 4-digit password twice, and press

**ENTER** (⊙) to create a new password.

### ■ If you forget your password

If you forget your password, you can clear it using the following steps:

- 1 Remove any disc that might be in the player.**
- 2 Select “Password” option in the “Setup” menu.**
- 3 Use Number buttons to enter “210499”.**  
The password is cleared.

### Note

- If you make a mistake before pressing **ENTER** (⊙), press **CLEAR**. Then input the correct password.

## DVD Rating

Blocks playback of rated DVD based on their content. (Not all discs are rated.)

### ▶ Rating 1-8:

Rating one (1) has the most restrictions and rating eight (8) is the least restrictive.

### ▶ Unlock:

If you select “**Unlock**”, parental control is not active and the disc plays in full.

## BD Rating

Sets an age limit of BD-ROM playback. Use number buttons to input an age limit for BD-ROM viewing.

### ▶ 255:

All BD-ROM can be played.

### ▶ 0-254:

Prohibits play of BD-ROM with corresponding ratings recorded on them.

### Note

- The “**BD Rating**” will be applied only for the BD disc that containing the Advanced Rating Control.

## Area Code

Enter the code of the area whose standards were used to rate the DVD video disc, based on the list on page 35.

## NETWORK Menu

The “**NETWORK**” settings are needed to use BD-LIVE interactivity, Netflix and software updates.

## Connection Setting

If your home network environment is ready to connect to the player, the player needs to be set up for network connection for network communication. See “Connecting to your Home Network” (→ 16–17).

## Connection Status

If you want to check the network status on this player, select the “**Connection Status**” options and press **ENTER** (⊙) to check whether a connection to the network and the internet have been established.

## BD-LIVE connection

You can restrict Internet access when BD-LIVE functions are used.

### ▶ Permitted:

Internet access is permitted for all BD-LIVE content.

### ▶ Partially Permitted:

Internet access is permitted only for BD-LIVE content which have content owner certificates. Internet access and AACs Online functions are prohibited for all BD-LIVE content without a certificate.

### ▶ Prohibited:

Internet access is prohibited for all BD-LIVE content.

## Netflix

You can check the ESN number, or deactivate Netflix.

### ▶ Netflix ESN:

You can check the ESN number, which is a serial number to identify this unit by Netflix.

### ▶ Deactivate Netflix:

Deactivate the connection to Netflix.

### DivX VOD

---

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video.

Visit [www.divx.com](http://www.divx.com) for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device setup menu. Go to [vod.divx.com](http://vod.divx.com) with this code to complete the registration process and learn more about DivX VOD.

▶ **Register:**

Displays the registration code of your player.

▶ **Deregister:**

Deactivate your player and display the deactivation code.

**Note**

- All the downloaded videos from DivX VOD with this player's registration code can only be played back on this unit.

### Auto Power Off

---

The screen saver appears when you leave the player in Stop mode for about five minutes. If you set this option to “On”, the unit automatically turns itself off after the Screen Saver is displayed for 25 minutes.

Set this option to “Off” to leave the screen saver until the unit is operated by the user.

### Initialize

---

▶ **Factory Set:**

You can reset the player to its original factory settings.

▶ **BD Storage Clear:**

Initializes the BD contents from the connected USB storage.

**Note**

- If you reset the player to its original factory settings using “**Factory Set**” option, you have to set the network settings again.

### Software

---

▶ **Information:**

Displays the current software version.

▶ **Update:**

You can update the software by connecting the unit directly to the software update server.

Check the network connection and settings

(→ 16–17).

Follow the on-screen instructions.

**Caution**

- **During the software update procedure, do not disconnect the AC power cord or LAN cable.**


# General Playback

## Playing Discs

**1** Press **OPEN/CLOSE** (▲), and place a disc on the disc tray.

**2** Press **OPEN/CLOSE** (▲) to close the disc tray.  
For the most Audio CD, BD-ROM and DVD-ROM discs, playback starts automatically.

**3** Press **HOME** (🏠).

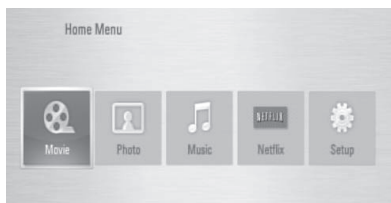

**4** Select “Movie”, “Photo” or “Music” using **◀/▶**, and press **ENTER** (⊙).

**5** Select the “Disc” option using **◀/▶**, and press **ENTER** (⊙).



This step is only needed when a disc is set and a USB device is connected to this unit.

**6** Select a file using **▲/▼/◀/▶**, and press **▶** (PLAY) or **ENTER** (⊙) to play the file.

### Note

- Playback functions described in this manual are not always available in all files and media. Some functions can be restricted depending on many factors.
- Depending on the BD-ROM titles, a USB device connection may be needed for the proper playback.

### ■ To stop playback

Press **■** (STOP) during playback.

### ■ To pause playback

Press **■** (PAUSE) during playback.

Press **▶** (PLAY) to resume playback.

### ■ To play frame-by-frame

Press **■** (PAUSE) while movie playback.

Press **■** (PAUSE) repeatedly to play Frame-by-Frame playback.

### ■ To scan forward or backward

Press **◀◀** or **▶▶** to play fast forward or fast reverse during playback.

You can change the various playback speeds by pressing **◀◀** or **▶▶** repeatedly.

### ■ To slow down the playing speed

While the playback is paused, press **▶▶** repeatedly to play various speeds of slow motion.

### ■ To skip to the next/previous chapter/track/file

During playback, press **◀◀◀** or **▶▶▶** to go to the next chapter/track/file or to return to the beginning of the current chapter/track/file.

Press **◀◀◀** twice briefly to step back to the previous chapter/track/file.

## Using the disc menu

**BD | DVD | AVCHD**

### ■ To display the disc menu

The menu screen may be displayed first after loading a disc which contains a menu. If you want to display the disc menu during playback, press **TOP MENU**.

Use **▲/▼/◀/▶** buttons to navigate through menu items.

### ■ To display the Pop-up menu

Some BD-ROM discs contain a Pop-up menu that appears during playback.

Press **POP UP MENU/MENU** during playback, and use **▲/▼/◀/▶** buttons to navigate through menu items.

## Resume playback

**BD | DVD | AVCHD | MOVIE | CD | MUSIC**

The unit records the point where you pressed the **■** (STOP) depending on the disc.

If “**■** (Resume Stop)” appears on the screen briefly, press **▶** (PLAY) to resume playback (from the scene point).

If you press **■** (STOP) twice or unload the disc, “**■** (Complete Stop)” appears on the screen. The unit will clear the stopped point.

### Note

- The resume point may be cleared when a button is pressed (for example; **ON/STANDBY** I/⏻, **OPEN/CLOSE** (▲), etc).
- On BD-Video discs with BD-J, the resume playback function does not work.
- If you press **■** (STOP) once during BD-ROM interactive title playback, the unit will be in Complete Stop mode.

# Advanced Playback

## Repeat Playback

**BD DVD AVCHD CD MUSIC**

During playback, press **REPEAT** repeatedly to select a desired repeat mode.

### BDs/DVDs

- ▶ **A-:**  
Selected portion will be repeated continuously.
- ▶ **Chapter:**  
The current chapter will be played back repeatedly.
- ▶ **Title:**  
The current title will be played back repeatedly.  
To return to normal playback, press **REPEAT** repeatedly to select “Off”.

### Audio CDs/Music files

- ▶ **Track:**  
The current track or file will be played back repeatedly.
- ▶ **All:**  
All the tracks or files will be played back repeatedly.
- ▶ **X:**  
The tracks or files will be played back in random order.
- ▶ **X All:**  
All the tracks or files will be played back repeatedly in random order.
- ▶ **A-B:**  
Selected portion will be repeated continuously.  
(Audio CD only)  
To return to normal playback, press **CLEAR**.

#### Note

- If you press **▶▶** once during Repeat Chapter/Track playback, the repeat playback cancels.
- This function may not work on some discs or titles.

## Repeating a specific portion

**BD DVD AVCHD CD**

This player can repeat a portion you have selected.

- 1** During playback, press **REPEAT** to select “A-” at the beginning of the portion you wish to repeat.
- 2** Press **ENTER** (Ⓢ) at the end of the portion.  
Your selected portion will be repeated continuously.
- 3** To return to normal playback, press **REPEAT** repeatedly to select “Off”.

#### Note

- You cannot select a portion less than 3 seconds.
- This function may not work on some discs or titles.

## Enlarge the playback image

**BD DVD AVCHD MOVIE PHOTO**

- 1** During playback or pause mode, press **ZOOM** to display the “Zoom” menu.
- 2** Use **A** or **B** button to zoom out or in the picture.  
You can move through the zoomed picture using **▲/▼/◀/▶** buttons.
- 3** To return to the normal picture size, press **D** button.
- 4** Press **RETURN** (↵) to exit the “Zoom” menu.

## Marker Search

**BD DVD AVCHD MOVIE**

You can start playback from up to nine memorized points.

### To enter a marker

 
- 1** During playback, press **MARKER** at the desired point.  
The Marker icon appears on the TV screen briefly.
- 2** Repeat step 1 to add up to nine markers.

### To recall a marked scene

- 1** Press **SEARCH** and the search menu appears on the screen.
- 2** Press a number button to select a marker number that you want to recall.  
Playback starts from the marked scene.

### To delete a Marker

- 1** Press **SEARCH** and the search menu appears on the screen.



- 2** Press **▼** to highlight a marker number.  
Use **◀/▶** to select a marked scene that you want to delete.
- 3** Press **CLEAR** and the marked scene is erased from the search menu.

#### Note

- This function may not work on some discs or titles.
- All marked points are cleared if the title is in complete stop (■) mode, the title is changed or if you unload the disc.
- If the total length of the title is less than 10 seconds, this function is not available.



 
## Using the search menu

**BD DVD AVCHD MOVIE**

Using search menu, you can easily to find the point where you want to start playback.

### ■ To search a point

- 1** During playback, press **SEARCH** to display the search menu.



- 2** Press **◀/▶** to skip the playback 15 seconds forward or backward.

You can select a point that you want to skip by pressing and holding **◀/▶** button.

### ■ To start playback from a marked scene

- 1** Press **SEARCH** and the search menu appears on the screen.

- 2** Press **▼** to highlight a marker number.

Use **◀/▶** to select a marked scene that you want to playback.

- 3** Press **ENTER (Ⓢ)** to start playback from the marked scene.

#### Note

- This function may not work on some discs or titles.

## Last Scene Memory

**BD DVD**

This unit memorizes the last scene from the last disc that is viewed. The last scene remains in memory even if you remove the disc from the unit or switch off the unit. If you load a disc that has the scene memorized, the scene is automatically recalled.

#### Note

- Last Scene Memory function for a previous disc is erased once a different disc is played.
- This function may not work depending on the disc.
- On BD-Video discs with BD-J, the last scene memory function does not work.
- This unit does not memorize settings of a disc if you switch off the unit before commencing to play it.

# On-Screen display

You can display and adjust various information and settings about the content.

## Displaying content information on-screen

BD DVD AVCHD MOVIE

- 1 During playback, press **DISPLAY** to show various playback information.



- ① **Title**  
Current title number/total number of titles.
- ② **Chapter**  
Current chapter number/total number of chapters.
- ③ **Time**  
Elapsed playing time/total playback time.
- ④ **Audio**  
Selected audio language or channel.
- ⑤ **Subtitle**  
Selected subtitle.
- ⑥ **Angle**  
Selected angle/total number of angles.
- ⑦ **TV Aspect Ratio**  
Selected TV aspect Ratio.
- ⑧ **Picture Mode**  
Selected picture mode.

- 2 Select an option using **▲/▼**.

- 3 Use **◀/▶** to adjust the selected option value.

- 4 Press **RETURN** (↵) to exit the On-Screen display.

### Note

- If no button is pressed for a few seconds, the on-screen display disappears.
- A title number cannot be selected on some discs.
- Available items may differ depending on discs or titles.
- If BD interactive title is playing back, some setting information is displayed on the screen but prohibited to be changed.

## Playing from selected time

BD DVD AVCHD MOVIE

- 1 Press **DISPLAY** during playback.  
The time search box shows the elapsed playing time.
- 2 Select the “Time” option and then input the required start time in hours, minutes, and seconds from left to right.  
For example, to find a scene at 2 hours, 10 minutes, and 20 seconds, enter “21020”.  
Press **◀/▶** to skip the playback 60 seconds forward or backward.
- 3 Press **ENTER** (Ⓢ) to start playback from selected time.

### Note

- This function may not work on some disc or titles.

## Hearing different audio

BD DVD AVCHD MOVIE

- 1 During playback, press **DISPLAY** to display the On-Screen display.
- 2 Use **▲/▼** to select the “Audio” option.
- 3 Use **◀/▶** to select desired audio language, audio track or audio channel.

### Note

- Some discs allow you to change audio selections only via the disc menu. In this case, press **POP UP MENU/MENU** or **TOP MENU** button and choose the appropriate audio from the selections on the disc menu.
- Immediately after you have switched sound, there may be a temporary discrepancy between the display and actual sound.
- On BD-ROM disc, the multi audio format (5.1CH or 7.1CH) is displayed with “MultiCH” in the onscreen display.

## Selecting a subtitle language

BD DVD AVCHD MOVIE

- 1 During playback, press **DISPLAY** to display the On-Screen display.
- 2 Use **▲/▼** to select the “Subtitle” option.
- 3 Use **◀/▶** to select desired subtitle language.
- 4 Press **RETURN** (↵) to exit the On-Screen display.

### Note

- Some discs allow you to change subtitle selections only via the disc menu. If this is the case, press **POP UP MENU/MENU** or **TOP MENU** button and choose the appropriate subtitle from the selections on the disc menu.

## Watching from a different angle

BD DVD

If the disc contains scenes recorded at different camera angles, you can change to a different camera angle during playback.

- 1 During playback, press **DISPLAY** to display the On-Screen display.
- 2 Use **▲/▼** to select the “Angle” option.
- 3 Use **◀/▶** to select desired angle.
- 4 Press **RETURN** (↵) to exit the On-Screen display.

## Changing the TV Aspect Ratio

BD DVD AVCHD MOVIE

You can change the TV aspect ratio setting during playback.

- 1 During playback, press **DISPLAY** to display the On-Screen display.
- 2 Use **▲/▼** to select the “TV Aspect Ratio” option.
- 3 Use **◀/▶** to select desired option.
- 4 Press **RETURN** (↵) to exit the On-Screen display.

### Note

- Even if you change the value of the “TV Aspect Ratio” option in On-Screen display, the “TV Aspect Ratio” option in the “Setup” menu is not changed.

## Changing the Picture Mode


BD DVD AVCHD MOVIE

You can change the “Picture mode” option during playback.

- 1 During playback, press **DISPLAY** to display the On-Screen display.
- 2 Use **▲/▼** to select the “Picture mode” option.
- 3 Use **◀/▶** to select desired option.
- 4 Press **RETURN** (↵) to exit the On-Screen display.

### ■ Setting the “User setting” option

- 1 During playback, press **DISPLAY** to display the On-Screen display.
- 2 Use **▲/▼** to select the “Picture mode” option.
- 3 Use **◀/▶** to select the “User setting” option, and press **ENTER** (Ⓢ).

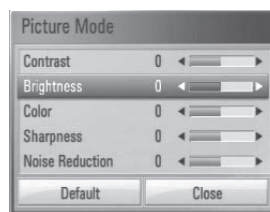

- 4 Use **▲/▼/◀/▶** to adjust the “Picture mode” options.  
Select “Default” option then press **ENTER** (Ⓢ) to reset the all video adjustments.
- 5 Use **▲/▼/◀/▶** to select the “Close” option, and press **ENTER** (Ⓢ) to finish setting.

# Enjoying BD-LIVE

This unit allows you to enjoy functions such as picture-in-picture, secondary audio and Virtual packages, etc., with BD-Video supporting BONUSVIEW (BD-ROM version 2 Profile 1 version 1.1/ Final Standard Profile). Secondary video and audio can be played from a disc compatible with the picture-in-picture function. For the playback method, refer to the instructions in the disc.

In addition to the BONUSVIEW function, BD-Video supporting BD-LIVE (BD-ROM version 2 Profile 2) that has a network extension function allows you to enjoy more functions such as downloading new movie trailers by connecting this unit to the internet.

- 1 Check the network connection and settings (→ 16–17).**
- 2 Insert a USB storage device to the USB port on the front panel.**  
A USB storage device is needed to download bonus content.
- 3 Press HOME (⬆), and set the “BD-LIVE connection” option on the “Setup” menu (→ 21).**  
Depending on the disc, the BD-LIVE function may not be operated if “BD-LIVE connection” option is set to “Partially Permitted”.
- 4 Insert a BD-ROM with BD-LIVE.**  
The operations may differ depending on the disc. Refer to the manual supplied with the disc.

## Caution

- Do not remove the connected USB device while content is being downloaded or a Blu-ray disc is still in the disc tray. Doing so may damage the connected USB device and BD-LIVE features may not operate properly with the damaged USB device anymore. If the connected USB device seems damaged from such an action, you can format the connected USB device from the PC and reuse it with this player.

## Note

- Some BD-LIVE content access may be restricted in some territories by contents provider’s own decision.  
It may take up to several minutes to load and start enjoying BD-LIVE content.

# Enjoying Netflix

This unit allows you to watch movies and TV episodes streamed instantly from Netflix (Version 2.0) via the Internet.

In order to use this feature, you must visit the following website on your PC and become a Netflix member.

[netflix.com/Onkyo](http://netflix.com/Onkyo)

## Activating the Connection to Netflix

In order to watch movies and TV episodes streamed instantly from Netflix via the Internet, you must activate the connection between this unit and your Netflix account.

- 1 Check the network connection and settings (→ 16–17).**
- 2 Press HOME (⬆).**
- 3 Select “Netflix” using ◀/▶, and press ENTER (⊙).**  
Opening screen is displayed.
- 4 Select “yes” using ▲/▼, and press ENTER (⊙).**  
Activation screen with the activation code will appear.
- 5 On your PC, visit [netflix.com/activate](http://netflix.com/activate) and log into your account.**  
The entry screen of activation code will appear on your PC screen.
- 6 Enter the activation code which is displayed on the TV screen.**  
The connection to Netflix is successfully made.

## Note

- Netflix is available only in the United States.
- You cannot create a Netflix account on this unit.
- You can deactivate the connection to Netflix by the “Deactivate Netflix” setting (→ 21).
- When you contact the Netflix customer service, you may be asked for the ESN number, which is a serial number to identify this unit by Netflix. You can check the ESN number on “Netflix ESN” screen (→ 21).

## Watching Streaming Movies


After you set up the connection to Netflix, you can watch movies on your TV.

- 1 Press HOME (⬆).**
- 2 Select “Netflix” using ◀/▶, and press ENTER (⊙).**  
Opening screen is displayed.

# Playing a movie file

You can play movie files contained in a disc/USB device.

## 1 Press HOME (⬆).

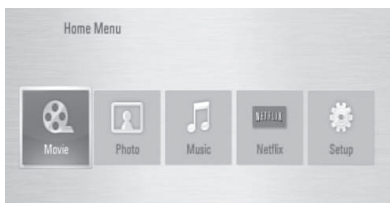

## 2 Select "Movie" using ◀/▶, and press ENTER (⊙).

## 3 Select "Disc" or "USB" option using ◀/▶, and press ENTER (⊙).



This step is only needed when a disc is set and a USB device is connected to this unit.

## 4 Select a file using ▲/▼/◀/▶, and press ▶ (PLAY) or ENTER (⊙) to play the file.

### Note

- The file requirements are described on page 6.
- You can use various playback functions (→ 23–25).

## Selecting a subtitle file


### MOVIE

If a movie file name and the subtitle file name are the same, subtitle file is played automatically when playing the movie file.

If the subtitle file name is different with the movie file name, you need to select the subtitle file on the [Movie] menu before playing the movie.

## 1 Use ▲/▼/◀/▶ to select the subtitle file you wish to play in the "Movie" menu.

## 2 Press ENTER (⊙).

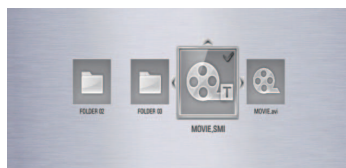

Press ENTER (⊙) again to deselect the subtitle file. Selected subtitle file will be displayed when you play the movie file.

### Note

- If you press ■ (STOP) during playback, the subtitle selection is cancelled.

## Changing subtitle code page


### MOVIE

If the subtitle is not displayed properly, you can change the subtitle code page to view the subtitle file properly.

## 1 During playback, press DISPLAY to display the On-Screen display.

## 2 Use ▲/▼ to select the "Code Page" option.

## 3 Use ◀/▶ to select desired code option.

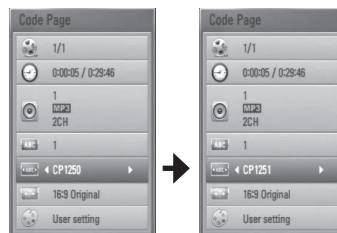


Select the subtitle code, based on the list on page 37.

## 4 Press RETURN (↵) to exit the On-Screen display.

# Viewing a photo


You can view photo files using this player.

## 1 Press HOME (🏠).

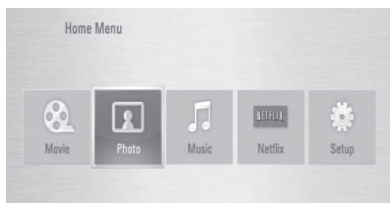


## 2 Select "Photo" using ◀/▶, and press ENTER (⊙).

## 3 Select the "Disc" or "USB" option using ◀/▶, and press ENTER (⊙).

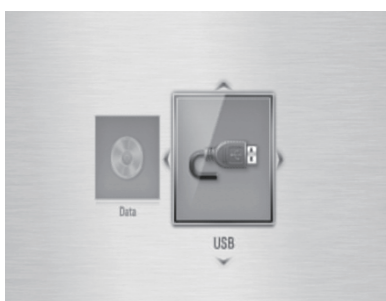

This step is only needed when a disc is set and a USB device is connected to this unit.

## 4 Select a file using ▲/▼/◀/▶, and press ENTER (⊙) to view the photo in full screen.

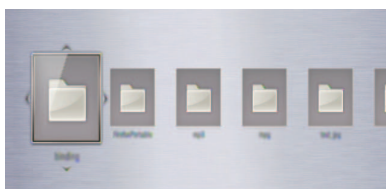

### ■ To play a slide show

Press ► (PLAY) to start slide show.

### ■ To stop a slide show

Press ■ (STOP) during slide show.

### ■ To pause a slide show

Press || (PAUSE) during slide show.

Press ► (PLAY) to re-start the slide show.

### ■ To skip to the next/previous photo

While viewing a photo in full screen, press ◀ or ▶ to go to the previous or next photo.

#### Note


- The file requirements are described on page 6.
- You can use various playback functions (→ 23–25).

## Options while viewing a photo

You can use various options while viewing a photo in full screen.

## 1 While viewing a photo in full screen, press DIS-PLAY to display the option menu.

## 2 Select an option using ▲/▼.

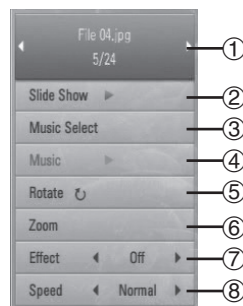

### ① Current photo/Total number of photos

Use ◀/▶ to view previous/next photo.

### ② Slide Show

Press ENTER (⊙) to start or pause slide show.

### ③ Music Select

Select the background music for the slide show (→ 31).

### ④ Music

Press ENTER (⊙) to start or pause background music.

### ⑤ Rotate

Press ENTER (⊙) to rotate the photo clockwise.

### ⑥ Zoom

Press ENTER (⊙) to display the "Zoom" menu.

### ⑦ Effect

Use ◀/▶ to select a transition effect between photos in a slide show.

### ⑧ Speed


Use ◀/▶ to select a delay time between photos in a slide show.

## 3 Press RETURN (↵) to exit the option menu.

## Listening to music during a slide show


You can display photo files while listening to music files.

### 1 Press **HOME** (🏠).

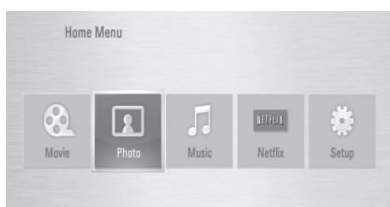

### 2 Select “Photo” using **◀/▶**, and press **ENTER** (⊙).

### 3 Select the “Disc” or “USB” option using **◀/▶**, and press **ENTER** (⊙).

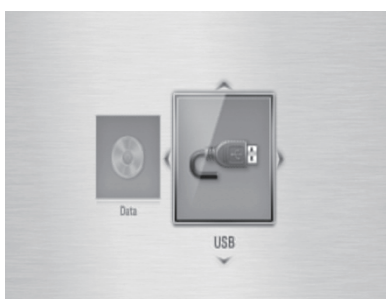

### 4 Select a file using **▲/▼/◀/▶**, and press **ENTER** (⊙) to view the photo.

### 5 Press **DISPLAY** to display the option menu.

### 6 Use **▲/▼** to select “Music Select” option, and press **ENTER** (⊙) to display the “Music Select” menu.

### 7 Use **▲/▼** to select a device, and press **ENTER** (⊙).

### 8 Use **▲/▼** to select a file or a folder you wish to play.



Select a folder and press **ENTER** (⊙) to display the lower directory.


Select “**⏮**” and press **ENTER** (⊙) to display the upper directory.

### 9 Use **▶** to select “OK”, and press **ENTER** (⊙) to complete music selection.

## Listening to music

The player can play Audio CDs and music files.

### 1 Press **HOME** (🏠).

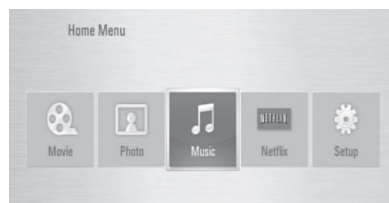


### 2 Select “Music” using **◀/▶**, and press **ENTER** (⊙).

### 3 Select the “Disc” or “USB” option using **◀/▶**, and press **ENTER** (⊙).



This step is only needed when a disc is set and a USB device is connected to this unit.

### 4 Select a music file or audio track using **▲/▼/◀/▶**, and press **ENTER** (⊙) to play the music.

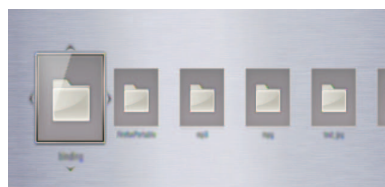

#### Note

- The file requirements are described on page 6.
- You can use various playback functions (→ 23–25).

# Notes on Discs

---

## Handling Discs

---

Do not touch the playback side of the disc. Hold the disc by the edges so that fingerprints do not get on the surface. Never stick paper or tape on the disc.

## Storing Discs

---

After playing, store the disc in its case. Do not expose the disc to direct sunlight or sources of heat and never leave it in a parked car exposed to direct sunlight.

## Cleaning Discs

---

Fingerprints and dust on the disc can cause poor picture quality and sound distortion. Before playing, clean the disc with a clean cloth. Wipe the disc from the center to out.

Do not use strong solvents such as alcohol, benzene, thinner, commercially available cleaners, or anti-static spray intended for older vinyl records.

# Handling the Unit

---

## When shipping the unit

---

Please save the original shipping carton and packing materials. If you need to ship the unit, for maximum protection, re-pack the unit as it was originally packed at the factory.

## Keeping the exterior surfaces clean

---

- Do not use volatile liquids such as insecticide spray near the unit.
- Wiping with strong pressure may damage the surface.
- Do not leave rubber or plastic products in contact with the unit for a long period of time.

## Cleaning the unit

---

To clean the player, use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents such as alcohol, benzene, or thinner, as these might damage the surface of the unit.

## Maintaining the Unit

---

The unit is a high-tech, precision device. If the optical pick-up lens and disc drive parts are dirty or worn, the picture quality could be diminished. For details, please contact your nearest authorized service center.



# Troubleshooting

## General

### ■ The Power does not turn on.

Plug the power cord into the wall outlet securely.

### ■ The unit does not start playback.

Insert a playable disc. (Check the disc type, color system, and regional code.)

Place the disc with the playback side down.

Place the disc on the disc tray correctly inside the guide.

Clean the disc.

Cancel the Rating function or change the rating level.

### ■ The angle cannot be changed.

Multi-angles are not recorded on the DVD Video being played.

### ■ Cannot play music/photo/movie files.

The files are not recorded in a format that the unit can play.

The unit does not support the codec of the movie file.

### ■ The remote control does not work properly.

The remote control is not pointed at the remote sensor of the unit.

The remote control is too far from the unit.

There is an obstacle in the path of the remote control and the unit.

The batteries in the remote control are exhausted.

### ■ The unit is plugged in, but the power will not turn on or off.

### ■ The unit is not operating normally.

You can reset the unit as follows.

1. Press and hold the **I/⏻ ON/STANDBY** button for at least five seconds. This will force the unit to power off then turn the unit back on.
2. Unplug the power cord, wait at least five seconds, and then plug it in again.

## Picture

### ■ There is no picture.

Select the appropriate video input mode on the TV so the picture from the unit appears on the TV screen.

Connect the video connection securely.

Check that the “**HDMI Color Setting**” in the “**Setup**” menu is set to the appropriate item that conforms to your video connection.

Your TV may not support the resolution you have set on the player. Change to a resolution that your TV accepts.

The player’s **HDMI OUT** jack is connected to a DVI device that does not support copyright protection.

### ■ Picture noise appears.

You are playing a disc recorded in a color system that is different from your TV.

Set to a resolution that your TV accepts.

## Sound

### ■ There is no sound or the sound is distorted.

Connect the audio connection securely.

The input source setting on the amplifier or the connection to the amplifier is incorrect.

The unit is in scan, slow motion, or pause mode.

The sound volume is low.

Check that the connected amplifier is compatible with the audio format output from the player.

The player’s **HDMI OUT** jack is connected to a DVI device. The DVI jack does not accept audio signals.

Check that the device connected to player’s **HDMI OUT** jack is compatible with audio format output from the player.

## Network

### ■ BD-LIVE feature does not work.

The connected USB storage may not have enough space. Connect the USB storage with at least 1GB free space.

Ensure that the unit is correctly connected to the local area network and can access the internet (→ 16–17).

Your broadband speed may not be fast enough to use the BD-LIVE features. Contact your Internet Service Provider (ISP) and increase the broadband speed as recommended.

The “**BD-LIVE connection**” option in the “**Setup**” menu is set to “**Prohibited**”. Set the option to “**Permitted**”.

### ■ Cannot use Netflix feature.

---

Netflix is available only in the United States.

Check the network connection.

Visit [netflix.com/Onkyo](https://netflix.com/Onkyo) on your PC and become a Netflix member.

### ■ Cannot add movies or TV episodes to the instant Queue.

---

Visit [netflix.com](https://netflix.com) on your PC.

Adding movies or TV episodes on this unit is not available.

### ■ Even though the speed of the Internet connection improves during playback, the picture quality of Netflix streaming movie does not improve.

---

The picture quality does not change during playback.

The picture quality differs depending on the speed of Internet connection at the time of loading.

### ■ The picture quality of streaming movie is poor.

---

Check the speed of your Internet connection.


### ■ Streaming movie often stops or start buffering during playback.

---

Contact your Internet service provider. (You may need to improve the broadband speed.)

# Controlling an AV receiver with the Supplied Remote Control

You can control your AV receiver using the buttons below.

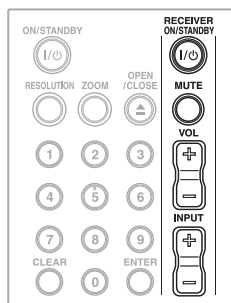

Button	Operation
ON/STANDBY I/O	Turn the AV receiver on or off.
MUTE	Mutes or unmutes the AV receiver.
VOL +/-	Adjust the volume of the AV receiver.
INPUT +/-	Switch the AV receiver's input source.

**Note**

- Be sure to set the “Remote ID” setting to “1” on the AV receiver.
- Depending on the unit being connected, you may not be able to control your AV receiver using some of the buttons.

## Area Code List

Choose an area code from this list.

Area	Code	Area	Code	Area	Code	Area	Code
Afghanistan	AF	Ethiopia	ET	Maldives	MV	Senegal	SN
Argentina	AR	Fiji	FJ	Mexico	MX	Singapore	SG
Australia	AU	Finland	FI	Monaco	MC	Slovak Republic	SK
Austria	AT	France	FR	Mongolia	MN	Slovenia	SI
Belgium	BE	Germany	DE	Morocco	MA	South Africa	ZA
Bhutan	BT	Great Britain	GB	Nepal	NP	South Korea	KR
Bolivia	BO	Greece	GR	Netherlands	NL	Spain	ES
Brazil	BR	Greenland	GL	Netherlands Antilles	AN	Sri Lanka	LK
Cambodia	KH	Hong Kong	HK	New Zealand	NZ	Sweden	SE
Canada	CA	Hungary	HU	Nigeria	NG	Switzerland	CH
Chile	CL	India	IN	Norway	NO	Taiwan	TW
China	CN	Indonesia	ID	Oman	OM	Thailand	TH
Colombia	CO	Israel	IL	Pakistan	PK	Turkey	TR
Congo	CG	Italy	IT	Panama	PA	Uganda	UG
Costa Rica	CR	Jamaica	JM	Paraguay	PY	Ukraine	UA
Croatia	HR	Japan	JP	Philippines	PH	United States	US
Czech Republic	CZ	Kenya	KE	Poland	PL	Uruguay	UY
Denmark	DK	Kuwait	KW	Portugal	PT	Uzbekistan	UZ
Ecuador	EC	Libya	LY	Romania	RO	Vietnam	VN
Egypt	EG	Luxembourg	LU	Russian Federation	RU	Zimbabwe	ZW
El Salvador	SV	Malaysia	MY	Saudi Arabia	SA		

# Language Code List

Use this list to input your desired language for the following initial settings: “**Disc Audio**”, “**Disc Subtitle**” and “**Disc Menu**”.

Language	Code	Language	Code	Language	Code	Language	Code
Afar	6565	French	7082	Lithuanian	7684	Singhalese	8373
Afrikaans	6570	Frisian	7089	Macedonian	7775	Slovak	8375
Albanian	8381	Galician	7176	Malagasy	7771	Slovenian	8376
Ameharic	6577	Georgian	7565	Malay	7783	Spanish	6983
Arabic	6582	German	6869	Malayalam	7776	Sudanese	8385
Armenian	7289	Greek	6976	Maori	7773	Swahili	8387
Assamese	6583	Greenlandic	7576	Marathi	7782	Swedish	8386
Aymara	6588	Guarani	7178	Moldavian	7779	Tagalog	8476
Azerbaijani	6590	Gujarati	7185	Mongolian	7778	Tajik	8471
Bashkir	6665	Hausa	7265	Nauru	7865	Tamil	8465
Basque	6985	Hebrew	7387	Nepali	7869	Telugu	8469
Bengali; Bangla	6678	Hindi	7273	Norwegian	7879	Thai	8472
Bhutani	6890	Hungarian	7285	Oriya	7982	Tonga	8479
Bihari	6672	Icelandic	7383	Panjabi	8065	Turkish	8482
Breton	6682	Indonesian	7378	Pashto, Pushto	8083	Turkmen	8475
Bulgarian	6671	Interlingua	7365	Persian	7065	Twi	8487
Burmese	7789	Irish	7165	Polish	8076	Ukrainian	8575
Byelorussian	6669	Italian	7384	Portuguese	8084	Urdu	8582
Chinese	9072	Japanese	7465	Quechua	8185	Uzbek	8590
Croatian	7282	Kannada	7578	Rhaeto-Romance	8277	Vietnamese	8673
Czech	6783	Kashmiri	7583	Rumanian	8279	Volapuk	8679
Danish	6865	Kazakh	7575	Russian	8285	Welsh	6789
Dutch	7876	Kirghiz	7589	Samoan	8377	Wolof	8779
English	6978	Korean	7579	Sanskrit	8365	Xhosa	8872
Esperanto	6979	Kurdish	7585	Scots Gaelic	7168	Yiddish	7473
Estonian	6984	Laothian	7679	Serbian	8382	Yoruba	8979
Faroese	7079	Latin	7665	Serbo-Croatian	8372	Zulu	9085
Fiji	7074	Latvian, Lettish	7686	Shona	8378		
Finnish	7073	Lingala	7678	Sindhi	8368		

# Subtitle Code List

Code page	Language
1250	Romanian, Slovenian, Hungarian, Slovak, Polish, Albanian, Serbian (Latin), Croatian, Czech
1251	Mongolian (Cyrillic), FYRO Macedonian, Uzbek (Cyrillic), Ukrainian, Azeri (Cyrillic), Tatar, Kazakh, Belarusian, Kyrgyz (Cyrillic), Bulgarian, Serbian (Cyrillic), Russian
1252	English (Jamaica), French (Canada), French (France), French (Luxembourg), English (New Zealand), English (Ireland), Dutch (Netherlands), English (Caribbean), French (Switzerland), English (Canada), Galician, English (Belize), German (Austria), French (Monaco), English (Zimbabwe), Basque, Dutch (Belgium), French (Belgium), Finnish, Faroese, German (Germany), English (Australia), English (United States), English (United Kingdom), Catalan, English (Trinidad), English (South Africa), Danish, English (Philippines), Spanish (Paraguay), Spanish (Colombia), Spanish (Costa Rica), Spanish (Dominican Republic), Spanish (Ecuador), Spanish (El Salvador), Spanish (Guatemala), Spanish (Honduras), Spanish (International Sort), Spanish (Chile), Spanish (Nicaragua) Spanish (Mexico), Spanish (Peru), Spanish (Puerto Rico), Spanish (Traditional Sort), Spanish (Uruguay), Spanish (Venezuela), Swahili Swedish, Swedish (Finland), German (Liechtenstein), Afrikaans, Spanish (Panama), German (Luxembourg), Spanish (Bolivia), German (Switzerland), Icelandic, Indonesian, Italian (Italy), Italian (Switzerland), Norwegian (Nynorsk), Spanish (Argentina), Portuguese (Brazil), Norwegian (Bokmal), Malay (Malaysia), Malay (Brunei Darussalam), Portuguese (Portugal)
1253	Greek
950	Traditional Chinese, Simplified Chinese
949	Korean

Subtitle codes available may vary depending on the region.

# Trademarks and Licenses



“Blu-ray Disc” is a trademark.



“BD-LIVE” logo is a trademark of Blu-ray Disc Association.

**BONUS VIEW™**

“BONUSVIEW” is trademark of Blu-ray Disc Association.



Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI licensing LLC.



“DVD Logo” is a trademark of DVD Format/Logo Licensing Corporation.



“AVCHD” and the “AVCHD” logo are trademarks of Panasonic Corporation and Sony Corporation.



Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,226,616; 6,487,535; 7,392,195; 7,272,567; 7,333,929; 7,212,872 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks, & DTS-HD, DTS-HD Master Audio | Essential and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.



DivX is a registered trademark of DivX, Inc., and is used under license.

**x.v.Color**

“x.v.Color” is a trademark of Sony Corporation.



Netflix and the Netflix logo are trademarks or registered trademarks of Netflix, Inc.

# Audio Output Specifications

Jack/Setting Source	Analog 2CH Output	Digital Output (DIGITAL AUDIO OUTPUT)* <sup>4</sup>		
		PCM Stereo	DTS Re-encode* <sup>3</sup> <sup>5</sup>	Primary Pass-Thru
Dolby Digital	PCM 2ch	PCM 2ch	DTS	Dolby Digital
Dolby Digital Plus	PCM 2ch	PCM 2ch	DTS	Dolby Digital
Dolby TrueHD	PCM 2ch	PCM 2ch	DTS	Dolby Digital
DTS	PCM 2ch	PCM 2ch	DTS	DTS
DTS-HD	PCM 2ch	PCM 2ch	DTS	DTS
Linear PCM 2ch	PCM 2ch	PCM 2ch	DTS	PCM 2ch
Linear PCM 5.1ch	PCM 2ch	PCM 2ch	DTS	PCM 2ch
Linear PCM 7.1ch	PCM 2ch	PCM 2ch	DTS	PCM 2ch

Jack/Setting Source	HDMI OUT			
	PCM Stereo	PCM Multi-Ch* <sup>3</sup>	DTS Re-encode* <sup>3</sup> <sup>5</sup>	Primary Pass-Thru* <sup>1</sup> <sup>2</sup> <sup>3</sup>
Dolby Digital	PCM 2ch	PCM 5.1ch	DTS	Dolby Digital
Dolby Digital Plus	PCM 2ch	PCM 5.1ch	DTS	Dolby Digital Plus
Dolby TrueHD	PCM 2ch	PCM 5.1ch	DTS	Dolby TrueHD
DTS	PCM 2ch	PCM 5.1ch	DTS	DTS
DTS-HD	PCM 2ch	PCM 7.1ch	DTS	DTS-HD
Linear PCM 2ch	PCM 2ch	PCM 2ch	DTS	PCM 2ch
Linear PCM 5.1ch	PCM 2ch	PCM 5.1ch	DTS	PCM 5.1ch
Linear PCM 7.1ch	PCM 2ch	PCM 7.1ch	DTS	PCM 7.1ch

\*<sup>1</sup> The secondary and interactive audio may not be included in the output bitstream if “**Digital Output**” or “**HDMI**” option is set to “**Primary Pass-Thru**”. (Except LPCM Codec: the output always includes interactive and secondary audio.)

\*<sup>2</sup> This player automatically selects the HDMI audio according to the decoding capability of the connected HDMI device even though “**HDMI**” option is set to “**Primary Pass-Thru**”.

\*<sup>3</sup> The “**PCM Multi-Ch**”/“**Primary Pass-Thru**” setting of the “**HDMI**” option and “**DTS Re-Encode**” setting of the “**Digital Output**” option cannot be set together. If you set them together, the “**HDMI**” or “**Digital Output**” option is set to “**PCM Stereo**” automatically.

\*<sup>4</sup> On the PCM audio output, the sampling frequency of **DIGITAL AUDIO OUTPUT** is limited to 96 kHz.

\*<sup>5</sup> If the “**HDMI**” or “**Digital Output**” option is set to [DTS Re-Encode], the audio output is limited to 48 kHz and 5.1Ch. If the “**HDMI**” or “**Digital Output**” option is set to “**DTS Re-Encode**”, the DTS Re-encode audio is output for BD-ROM discs, and the original audio is output for the other discs (like “**Primary Pass-Thru**”).

- If “**HDMI**” option is set to “**PCM Multi-Ch**” and “**Digital Output**” option is set to “**Primary Pass-Thru**” while playback Dolby Digital Plus or TrueHD audio, **DIGITAL AUDIO OUTPUT** is limited to “**PCM 2ch**”.

- If the HDMI connection is version 1.3 and Dolby Digital Plus/Dolby TrueHD is output from **HDMI OUT** jack, **DIGITAL AUDIO OUTPUT** jack is limited to “**PCM 2ch**” (When the HDMI and **DIGITAL AUDIO OUTPUT** are connected simultaneously).

- The audio is output as PCM 48 kHz/16 bit for MP3/WMA file and PCM 44.1 kHz/16 bit for Audio CD while playback.

- The Dolby TrueHD audio recorded on some Blu-ray discs consists of Dolby Digital and TrueHD audio. Dolby Digital audio is output through **DIGITAL AUDIO OUTPUT** jacks and “**DD**” displays on the screen if TrueHD audio is not output (for example, when “**HDMI**” is set to “**PCM Stereo**” and “**Digital Output**” is set to “**Primary Pass-Thru**”).

- You must select a digital audio output and a maximum sampling frequency that your Amplifier (or AV receiver) accepts using “**Digital Output**”, “**HDMI**” and “**Sampling Freq.**” options on the “**Setup**” menu (→ 20).

- With digital audio connection (**DIGITAL AUDIO OUTPUT** or **HDMI**), Disc Menu button sounds of BD-ROM may not be heard if the “**Digital Output**” or “**HDMI**” option is set to “**Primary Pass-Thru**”.

- If the audio format of the digital output does not match the capabilities of your receiver, the receiver will produce a strong, distorted sound or no sound at all.

- Multi-channel Digital Surround Sound via digital connection can only be obtained if your receiver is equipped with a Digital Multi-channel decoder.

# Video Output Resolution

## ■ When the non-copy protected media is playing back

Video Out Resolution	HDMI OUT	COMPONENT VIDEO OUT	
		HDMI connected	HDMI disconnected
480i	480p	480i	
480p	480p	480p	
720p	720p	720p	
1080i	1080i	1080i	
1080p 24 Hz	1080p 24 Hz	480i	1080i
1080p 60 Hz	1080p 60 Hz	480i	1080i

## ■ When the copy protected media is playing back (DVD, etc.)

Video Out Resolution	HDMI OUT	COMPONENT VIDEO OUT	
		HDMI connected	HDMI disconnected
480i	480p	480i	
480p	480p	480p	
720p	720p	480i	480p
1080i	1080i	480i	480p
1080p 24 Hz	1080p 24 Hz	480i	480p
1080p 60 Hz	1080p 60 Hz	480i	480p

### HDMI OUT connection

- If you select a resolution manually and then connect the **HDMI** jack to TV and your TV does not accept it, the resolution setting is set to “**Auto**”.
- If you select a resolution that your TV does not accept, the warning message will appear. After resolution change, if you cannot see the screen, please wait 20 seconds and the resolution will automatically revert back to the previous resolution.
- The 1080p video output frame rate may be automatically set to either 24 Hz or 60 Hz depending both on the capability and preference of the connected TV and based on the native video frame rate of the content on the BD-ROM disc.

### COMPONENT VIDEO OUT Connection

BD and DVD video stream could prevent up-scaling on analog output.

### VIDEO OUT connection

The resolution of the **VIDEO OUT** jack is always output at 480i resolution.



# Specifications

<b>Signal System</b>		NTSC
<b>Composite Video Output / Impedance</b>		1.0 V (p-p) / 75 Ω negative sync, RCA
<b>Component Video Output / Impedance</b>		Y: 1.0 V (p-p) / 75 Ω, PB/PR: 0.7 V (p-p) / 75 Ω, RCA
<b>Component Video Frequency Response</b>		5 Hz ~ 13 MHz
<b>Component Video Resolution</b>		480i, 480p
<b>HDMI</b>	<b>Resolution</b>	480i, 480p, 720p, 1080i, 1080p, 1080p 24Hz
	<b>Audio Format</b>	LPCM, Dolby Digital, Dolby Digital Plus, Dolby True HD, DTS, DTS-HD
	<b>Version</b>	1.3a
	<b>Support</b>	x.v.Color
	<b>Connector</b>	A Type
<b>Frequency Response (Digital Audio)</b>	<b>DVD Linear Sound</b>	4 Hz ~ 44 kHz (96 kHz) 4 Hz ~ 22 kHz (48 kHz)
	<b>Audio CD</b>	4 Hz ~ 20 kHz (44.1 kHz)
<b>Signal to Noise Ratio</b>		100 dB
<b>Audio Dynamic Range</b>		86 dB
<b>THD (Total Harmonic Distortion)</b>		0.005% (1 kHz)
<b>Wow and Flutter</b>		Below threshold of measurability
<b>Audio Output / Impedance (Digital/Coaxial)</b>		0.5 V (p-p) / 75 Ω
<b>Audio Output / Impedance (Analog)</b>		2.0 V (rms) / 320 Ω

## General

<b>Power Supply</b>		AC 120 V, 60 Hz
<b>Power Consumption</b>		20 W
<b>Stand-by Power Consumption</b>		0.1 W
<b>Dimensions (W x H x D)</b>		435 mm x 53 mm x 209 mm
<b>Weight</b>		2.0 kg
<b>Operation Condition Temperature/Humidity</b>		5 °C ~ 35 °C (41 °F ~ 95 °F) / 5% ~ 90%
<b>Bus Power Supply (USB)</b>		DC 5V, 0.5 A
<b>Disc Compatibility</b>	CD-R, CD-RW, DVD-R, DVD-RW, DVD-R DL, DVD+R, DVD+RW, DVD+R DL, BD-R, BD-RE, USB (Discs that have not been properly finalized may only be partially playable or not playable at all.)	

Design and specifications are subject to change without notice.

## Supported File Type

✓: Supported

File Type, Disc Format	Disc/Media Type					
	BD-R	BD-RE	DVD-R/RW	DVD+R/RW	CD-R/RW	USB
BDMV	✓	✓	–	–	–	–
VIDEO MODE	–	–	✓	✓	–	–
AUDIO CD	–	–	–	–	✓	–
MP3, WMA	✓	✓	✓	✓	✓	✓
JPEG, PNG	✓	✓	✓	✓	✓	✓
MPEG1, MPEG2, MPEG4	✓	✓	✓	✓	✓	✓
DivX (HT V3 ~ 6)	✓	✓	✓	✓	✓	✓
DivX (VOD 3.0)	✓	✓	✓	✓	✓	–
DivX (HD V1.0)	✓	✓	✓	✓	✓	✓
DivX (HD V1.1)	✓	✓	✓	✓	✓	✓
AVCHD	–	–	✓	✓	–	–

# Open source software notice

---

The following GPL executables and LGPL libraries used in this product are subject to the GPL2.0/LGPL2.1 License Agreements:

**GPL EXECUTABLES:** Linux kernel 2.6, bash, busybox, cramfs, dhcpcd, e2fsprogs, fdisk, mkdosfs, mtd-utils, net-tools, procps, samba-3.0.25b, sysutils, tcpdump, tftpd, tinylogin, unzip, utelnetd

**LGPL LIBRARIES:** uClibc, DirectFB, blowfish, cairo, ffmpeg, iconv, libusb, mpg123

**gSOAP Public License 1.3 LIBRARY:** gsoap

Part of the software embedded in this product is gSOAP software.

Portions created by gSOAP are Copyright © 2001-2009 Robert A. van Engelen, Genivia inc. All Rights Reserved. THE SOFTWARE IN THIS PRODUCT WAS IN PART PROVIDED BY GENIVIA INC AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

You can obtain a copy of the GPL, LGPL licenses from <http://www.gnu.org/licenses/old-licenses/gpl-2.0.html> and <http://www.gnu.org/licenses/old-licenses/lgpl-2.1.html>.

Also you can obtain a copy of gSOAP public license from <http://www.cs.fsu.edu/~engelen/license.html>.

This software is based in part on the work of the Independent JPEG Group copyright © 1991-1998, Thomas G. Lane.

This product includes

- boost C++: copyright © Beman Dawes 1999-2003
- c-ares: copyright © 1998 by the Massachusetts Institute of Technology
- curl: copyright © 1996-2008, Daniel Stenberg
- expat: copyright © 2006 expat maintainers
- freetype: copyright © 2003 The FreeType Project ([www.freetype.org](http://www.freetype.org)).
- jpeg: This software is based in part on the work of the Independent JPEG Group copyright © 1991-1998, Thomas G. Lane.
- mng: copyright © 2000-2007 Gerard Juyn, Glenn Randers-Pehrson
- ntp: copyright © David L. Mills 1992-2006

• OpenSSL:

- cryptographic software written by Eric Young ([eay@cryptsoft.com](mailto:eay@cryptsoft.com)).
- software written by Tim Hudson ([tjh@cryptsoft.com](mailto:tjh@cryptsoft.com)).
- software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (<http://www.openssl.org>)
- png: copyright © 2004 Glenn Randers-Pehrson
- portmap: copyright © 1990 The Regents of the University of California
- ptmalloc: copyright © 2001-2006 Wolfram Gloger
- UnitTest++: copyright © 2006 Noel Llopis and Charles Nicholson
- UPnP SDK: copyright © 2000-2003 Intel Corporation
- strace:
  - copyright © 1991, 1992 Paul Kranenburg
  - copyright © 1993 Branko Lankester
  - copyright © 1993 Ulrich Pegelow
  - copyright © 1995, 1996 Michael Elizabeth Chastain
  - copyright © 1993, 1994, 1995, 1996 Rick Sladkey
  - copyright © 1999,2000 Wichert Akkerman
- xml2: copyright © 1998-2003 Daniel Veillard
- XML-RPC For C/C++:
  - copyright © 2001 by First Peer, Inc. All rights reserved.
  - copyright © 2001 by Eric Kidd. All rights reserved.
- zlib: copyright © 1995-2002 Jean-loup Gailly and Mark Adler.

All rights reserved.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

# Network Service Disclaimer

---

Content and services made available through this product are transmitted by third parties by means of networks and transmission facilities over which Company has no control and third party services may be terminated or interrupted at any time, and Company makes no representation or warranty that any content or service will remain available for any period of time. Without limiting the generality of this disclaimer, Company expressly disclaims any responsibility for any interruption or suspension of any content or service made available through this product. Company is not responsible for customer service related to the content and services. Any question or request for service relating to the content or services should be made directly to the respective content and service providers.

THIRD PARTY CONTENT AND SERVICES MADE AVAILABLE THROUGH THIS PRODUCT ARE PROVIDED “AS IS.” COMPANY DOES NOT WARRANT CONTENT OR SERVICES SO PROVIDED, FOR ANY PURPOSE WHATSOEVER. COMPANY EXPRESSLY DISCLAIMS ANY WARRANTIES, EXPRESS OR IMPLIED INCLUDING WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ACCURACY, VALIDITY, TIMELINESS, LEGALITY, SUITABILITY, OR QUALITY OF ANY CONTENT OR SERVICE MADE AVAILABLE THROUGH THIS PRODUCT.

IN NO EVENT SHALL COMPANY BE LIABLE FOR, ANY DAMAGES, WHETHER ARISING IN CONTRACT OR TORT, INCLUDING WITHOUT LIMITATION, ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, LOST PROFITS, ATTORNEY FEES, EXPENSES, OR ANY OTHER DAMAGES ARISING OUT OF, OR IN CONNECTION WITH, ANY CONTENT (OR ANY INFORMATION CONTAINED THEREIN) OR SERVICE PROVIDED TO THE USER OR ANY THIRD PARTY, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

All content and services accessible through this product belong to third parties and are protected by copyright, patent, trademark and/or other intellectual property rights. Such content and services are provided solely for the User’s personal noncommercial use. User may not use any content or services in a manner that has not been authorized by the content owner or service provider. Without limiting the foregoing, unless expressly authorized by the applicable content owner or service provider, you may not modify, copy, republish, upload, post, transmit, translate, sell, create derivative works, exploit, or distribute in any manner or medium any content or services made available through this product.

## **ONKYO CORPORATION**

Sales & Product Planning Div. : 2-1, Nisshin-cho, Neyagawa-shi, OSAKA 572-8540, JAPAN  
Tel: 072-831-8023 Fax: 072-831-8163

### **ONKYO U.S.A. CORPORATION**

18 Park Way, Upper Saddle River, N.J. 07458, U.S.A.  
Tel: 800-229-1687, 201-785-2600 Fax: 201-785-2650 <http://www.us.onkyo.com/>

### **ONKYO EUROPE ELECTRONICS GmbH**

Liegnitzerstrasse 6, 82194 Groebenzell, GERMANY  
Tel: +49-8142-4401-0 Fax: +49-8142-4401-555 <http://www.eu.onkyo.com/>

### **ONKYO EUROPE ELECTRONICS GmbH (UK BRANCH)**

The Coach House 81A High Street, Marlow, Buckinghamshire, SL7 1AB, UK  
Tel: +44-(0)1628-473-350 Fax: +44-(0)1628-401-700

### **ONKYO CHINA LIMITED**

Unit 1 & 12, 9/F, Ever Gain Plaza Tower 1, 88, Container Port Road, Kwai Chung,  
N.T., Hong Kong. Tel: 852-2429-3118 Fax: 852-2428-9039  
<http://www.ch.onkyo.com/>

Y1007-2

SN 29400461A

(C) Copyright 2010 ONKYO CORPORATION Japan. All rights reserved.



\* 2 9 4 0 0 4 6 1 A \*